



Instruction Manual
Rack Power Distribution Unit

RCX, RCO, RCM-O and RCU-O Series
Firmware Version 3

Contents

| | |
|---|-----------|
| Contents | 2 |
| Specifications | 4 |
| Overview | 4 |
| Environmental | 4 |
| Electrical | 4 |
| Receptacle Ratings | 4 |
| Networking | 4 |
| Data Formats | 5 |
| EMC Verification | 5 |
| Installation | 6 |
| Guidelines | 6 |
| Mounting | 7 |
| Network Overview | 13 |
| Default IP Address | 13 |
| Initial Setup | 14 |
| Web Interface | 16 |
| Overview | 16 |
| Sensors Page | 16 |
| Logging Page | 18 |
| Display Page | 19 |
| Alarms Page | 20 |
| Control Page (RCM-O and RCU-O Only) | 21 |
| Configuration Page | 23 |
| Unit Configuration | 28 |
| Network Configuration | 28 |
| Time and Date | 29 |
| E-Mail/ Business Hours | 30 |
| SNMP | 31 |
| Accounts and Passwords | 32 |
| Telnet | 33 |
| Camera Configuration | 33 |
| Admin Information | 34 |
| Kilowatt-Hours Reset | 34 |
| XML File Backup | 35 |
| SSL Certificate Upload | 35 |
| Alarms | 36 |
| Alarm Notifications | 36 |
| Alarm Types | 36 |
| Thresholds | 36 |
| Sensors | 38 |
| Overview | 38 |
| Internal Sensors | 38 |
| Remote Sensors | 39 |
| Data Logging and Display | 40 |
| Remote Outlet Switching (RCM-O and RCU-O Only) | 41 |
| Actions | 41 |
| Configuration | 42 |
| Power-On Actions | 42 |
| Accessories | 43 |
| Serial Communication (Delta Configured Units Only) | 43 |
| RSD2X8 Remote Display | 43 |
| IP-Addressable Network Cameras | 43 |

| | |
|--------------------------------|-----------|
| RSC Integration | 44 |
| Alternate Data Formats | 44 |
| Technical Support | 45 |
| Firmware Version | 45 |
| Firmware Updates | 45 |
| Resetting PDU | 45 |
| Service and Maintenance | 45 |
| More Technical Support | 45 |
| Table of Figures | 46 |
| Revision History | 48 |

Specifications

Overview

The RCM-O, RCU-O, RCO and RCX series units are rack level PDUs with circuit monitoring via a built-in web server. In the RCX series, built-in sensors monitor Voltage, Current, instantaneous and cumulative Power, as well as calculated Power Factor. The RCM-O series units have all these sensors plus outlet level switching. The RCO series units have the same built-in sensors as the RCX plus outlet level current and power monitoring, while RCU-O series units have all of the RCX sensors plus outlet level switching plus current and power monitoring. Web pages, including graphs, are generated by the unit to monitor power and environmental conditions within the cabinet. No software other than a web browser is required for operation and several data formats are available. Optional external sensors and network cameras are also available. These units can be built for installation in either Delta or Wye building wiring configurations.

Environmental

Temperature

| | | |
|-------------------------|-------------------|------------------|
| Operating (Vertical): | 10°C (50°F) min | 40°C (104°F) max |
| Operating (Horizontal): | 10°C (50°F) min | 45°C (113°F) max |
| Storage: | -25°C (-13°F) min | 65°C (149°F) max |

Humidity

| | | | |
|------------|--------|---------|------------------|
| Operating: | 5% min | 95% max | (non-condensing) |
| Storage: | 5% min | 95% max | (non-condensing) |

Elevation

| | | |
|------------|----------------|------------------------|
| Operating: | 0 m (0 ft) min | 2000 m (6561 ft) max |
| Storage: | 0 m (0 ft) min | 15240 m (50000 ft) max |

Electrical

See nameplate for unit ratings.

Receptacle Ratings

| | |
|----------------------|--|
| NEMA 5-15R or L5-15R | 125 Volts, 15 Amp |
| NEMA 5-20R or L5-20R | 125 Volts, 20 Amp |
| NEMA 6-20R or L6-20R | 250 Volts, 20 Amp |
| NEMA L5-30R | 125 Volts, 30 Amp |
| NEMA L6-30R | 250 Volts, 30 Amp |
| NEMA L15-30R | 250 Volts (3 phase), 30 Amp |
| IEC-320 C13 | 125/250 Volt, 15 Amp (per Receptacle Bank) |
| IEC-320 C19 | 125/250 Volt, 20 Amp |

Networking

Protocols

HTTP, HTTPS (SSL/TLS), SMTP, POP3, ICMP, DHCP, TCP/IP, NTP, Telnet, Syslog

Ethernet Link Speed

10 Mbit; half-duplex

Data Formats

HTML, SNMP, CSV/Plain Text, XML

EMC Verification

This Class A device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Installation

Guidelines

- If the PDU is installed in a cabinet the ambient temperature of the rack should be no greater than the PDU's maximum rated operating temperature.
- Install the PDU such that the amount of airflow required for safe operation of equipment is not compromised.
- Mount the PDU so that a hazardous condition is not achieved due to uneven mechanical loading.
- Follow nameplate ratings when connecting equipment to the branch circuit. Take into consideration the effect that overloading of the circuits might have on over-current protection and supply wiring.
- The PDU relies on the building installation for protection from over-current conditions. A Listed circuit breaker is required within the building installation. The circuit breaker should be sized according to the PDU's nameplate ratings and local/national electrical codes.
- Reliable earthing of rack-mount equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit. The PDU must be connected to an earthed socket-outlet.
- The PDU is intended for Restricted Access Locations only and only service personnel should install and access the PDU.
- For pluggable equipment, install the PDU so that the input plug or appliance coupler may be disconnected for service.
- Sequential power-up via Power-On Actions of devices powered by the PDU is recommended to avoid high inrush current. See Power-On Actions (page 42) for details.
- **Caution:** Disconnect all power cords before servicing.

Mounting

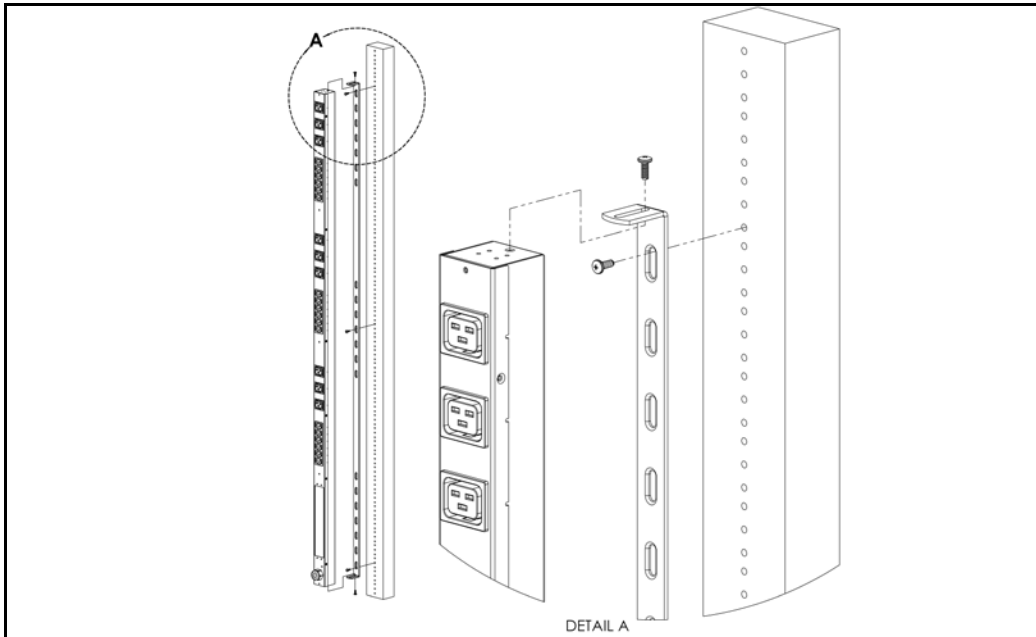


Figure 1: Full Length Bracket

Using the full length bracket, mount PDU to rack as shown

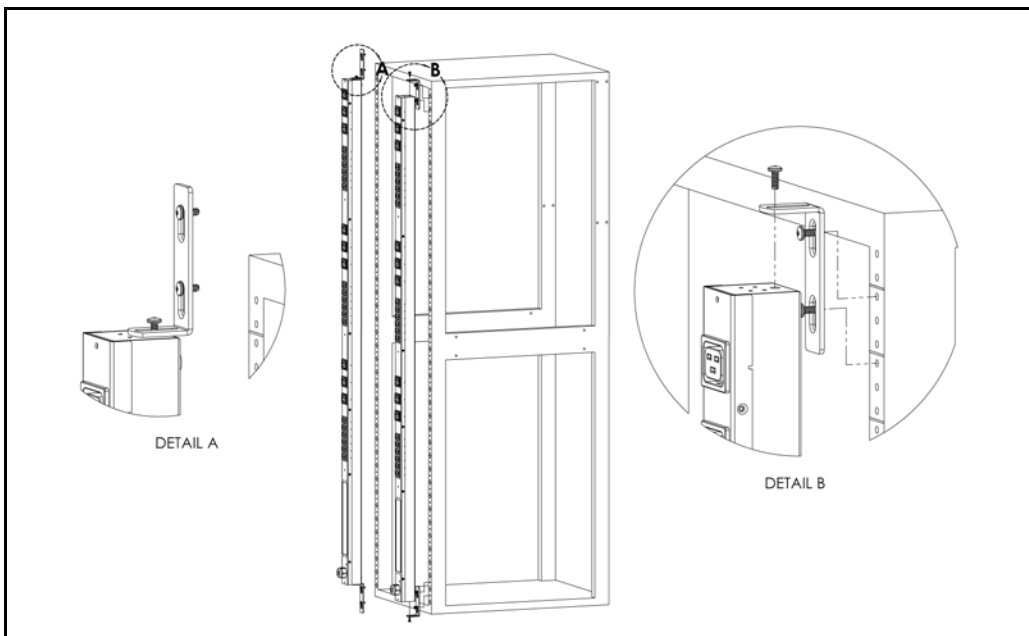


Figure 2: Mini "L" Brackets

Using the mini "L" brackets, attach PDU to rack as shown

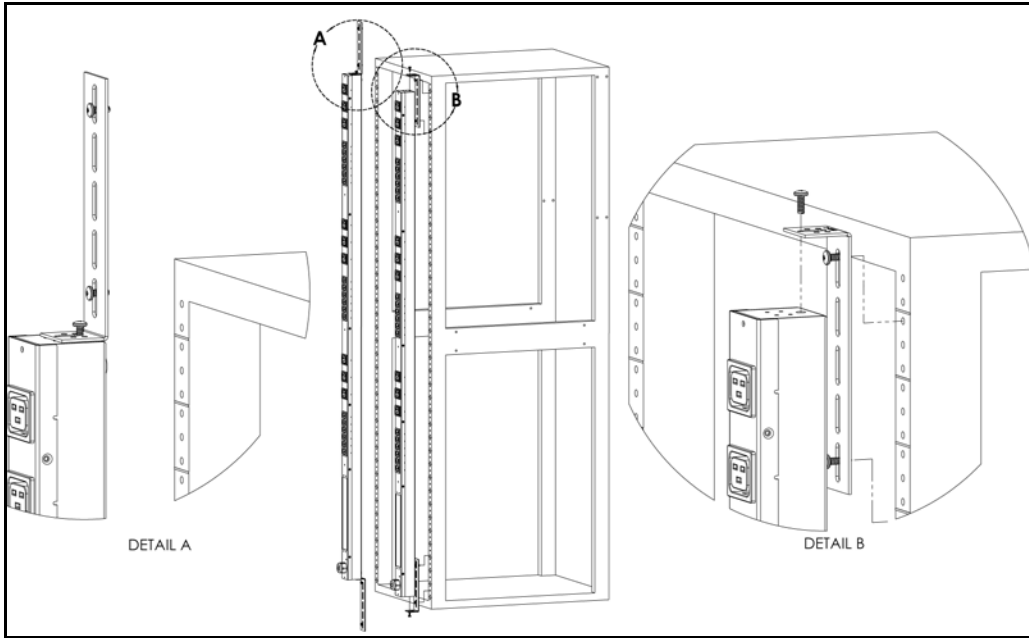


Figure 3: Vertical Extension Brackets

Using the vertical extension brackets, attach PDU to rack as shown

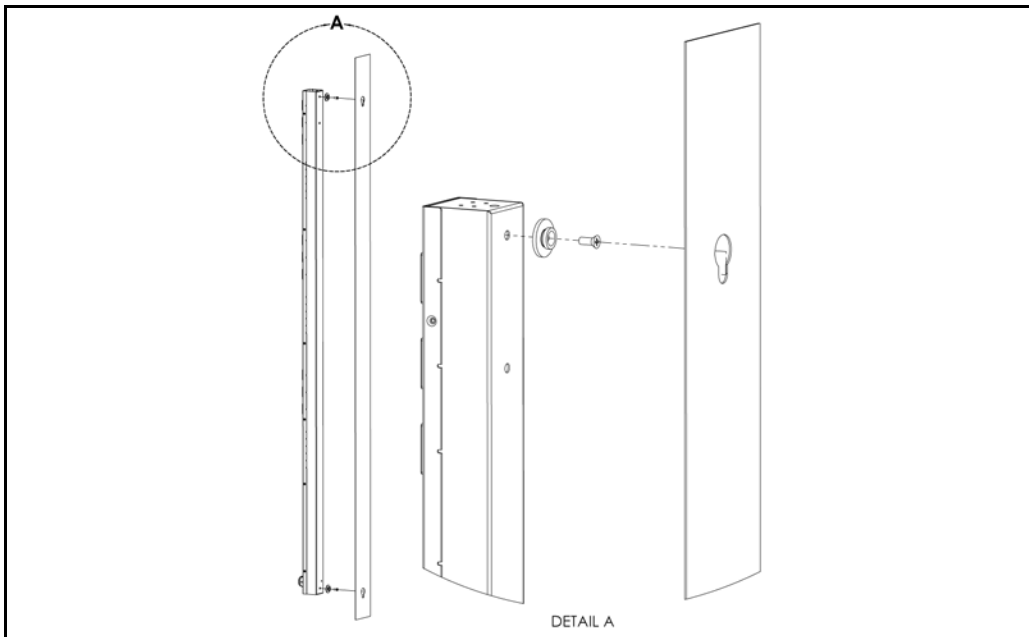


Figure 4: Toolless Mounting Hardware

Secure toolless mounting buttons to PDU as shown. Use toolless buttons with key-holed slots built into cabinet or with optional Geist key-holed brackets.

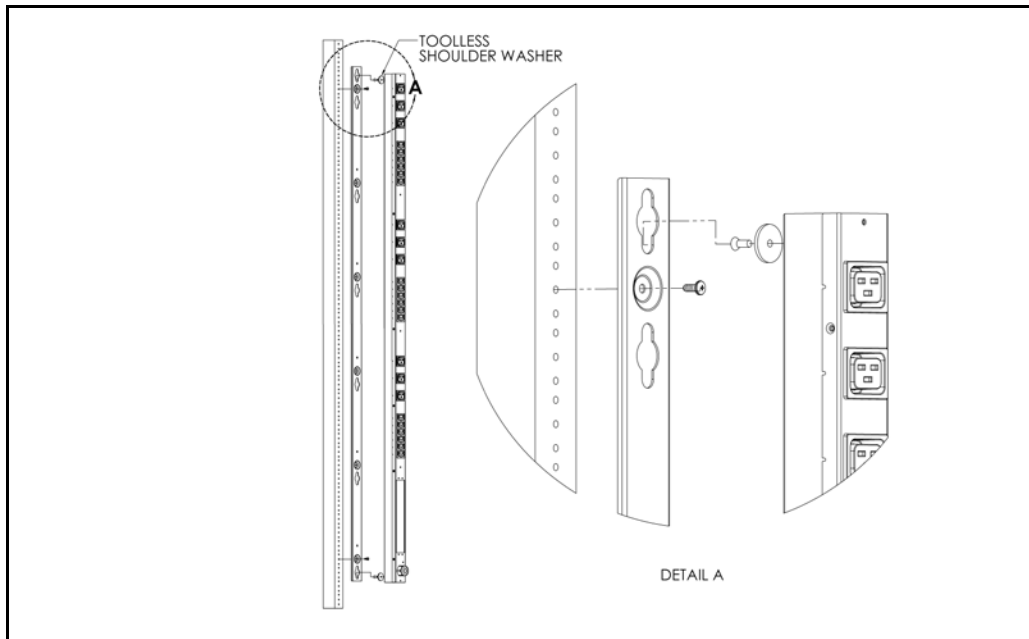


Figure 5: Toolless Full Length Bracket

Using full length toolless bracket and toolless mounting buttons, attach PDU to rack as shown

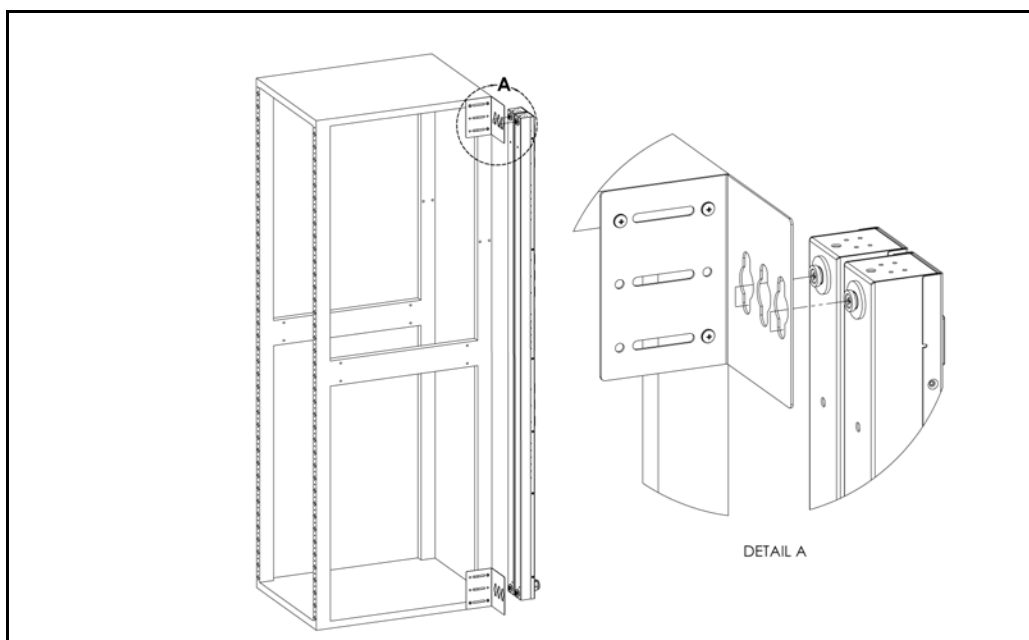


Figure 6: Single Side Mount 2 Unit Brackets

Using single side mount 2 unit brackets and toolless mounting buttons, attach PDU to rack as shown

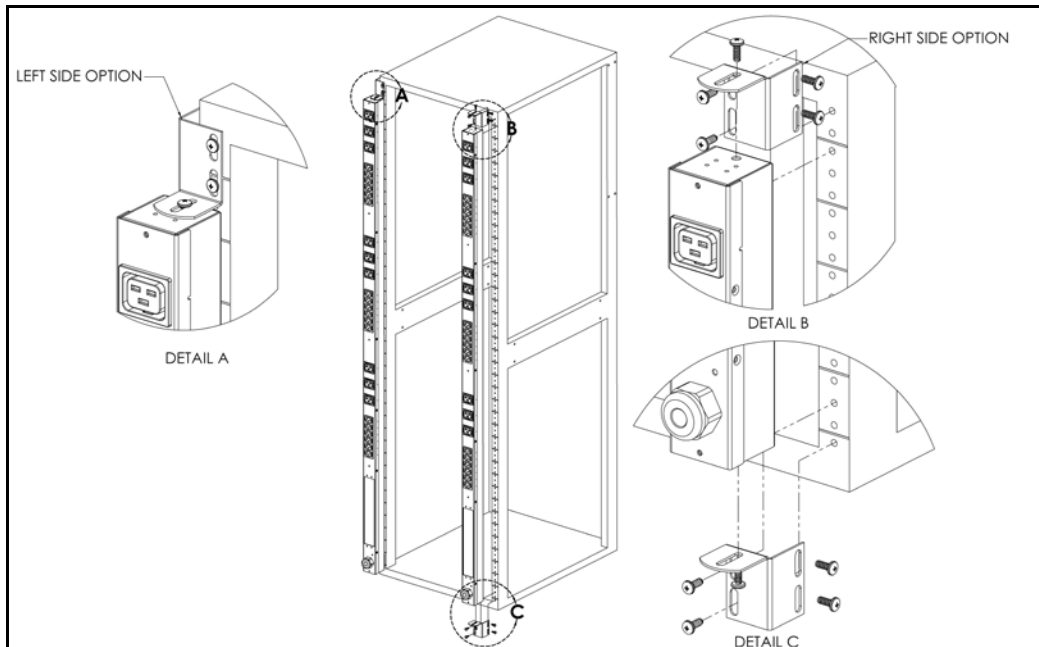


Figure 7: Offset/Side Mount Brackets

Using the offset/side mount brackets, attach PDU to rack as shown.

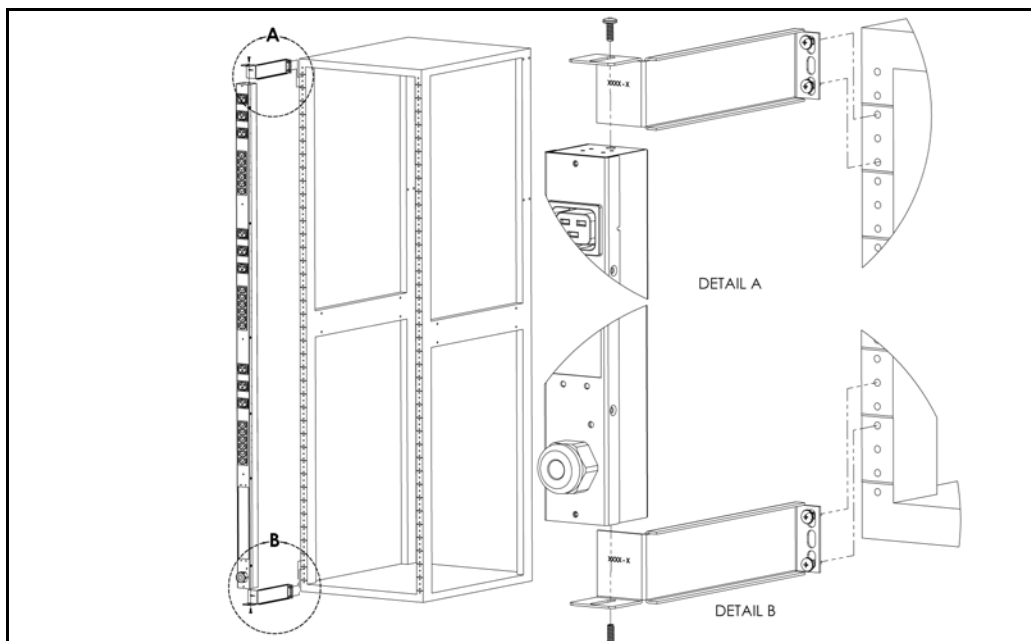


Figure 8: 7" Extension Brackets

Using the 7" extension brackets, attach PDU to rack as shown

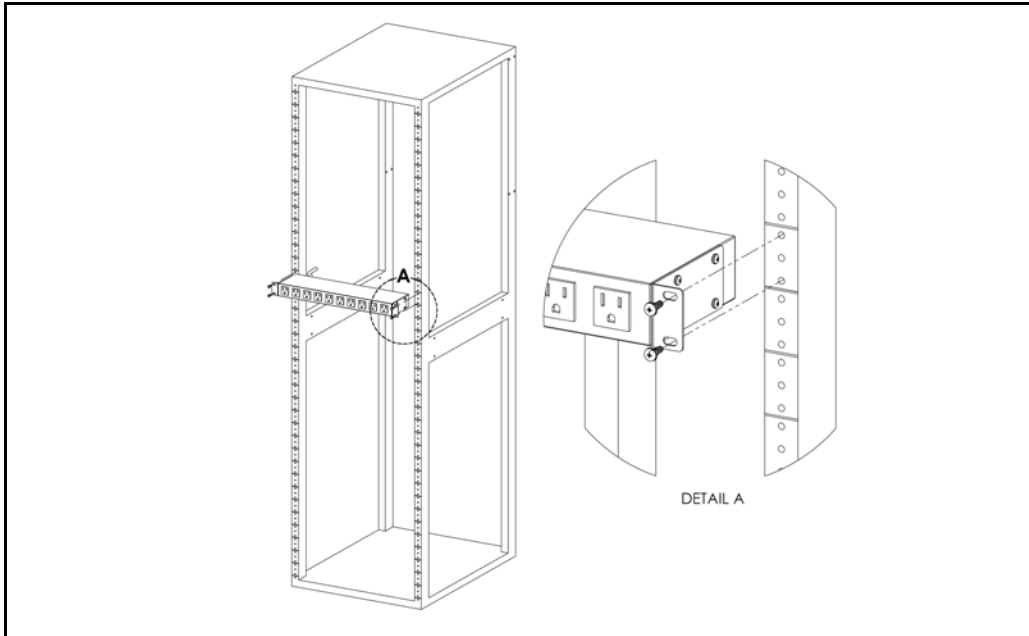


Figure 9: Flush Mount Brackets

Using flush mount brackets, attach PDU to rack as shown

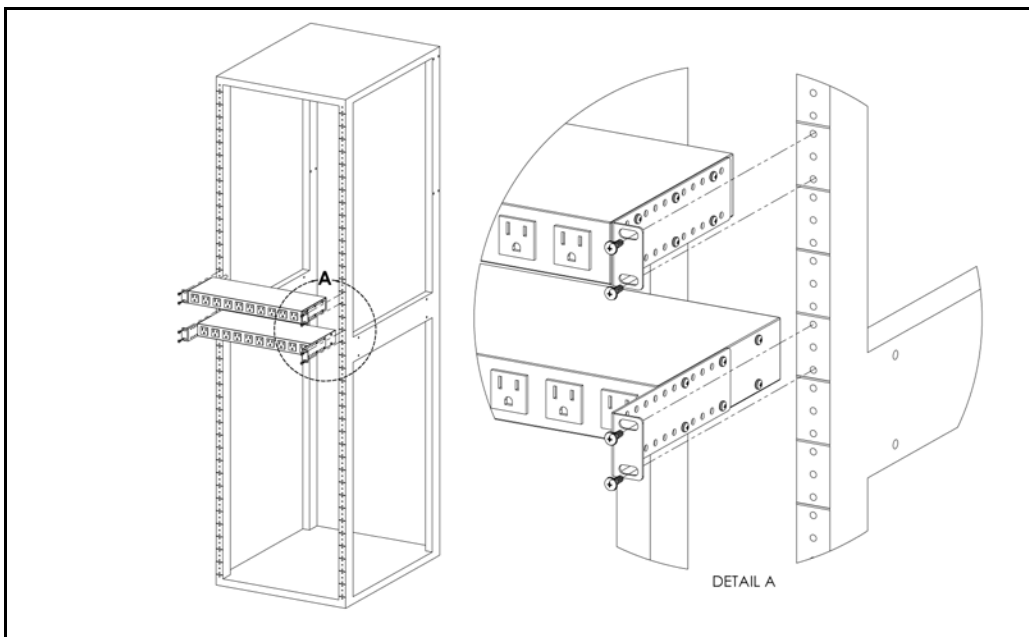


Figure 10: Adjustable Mount Brackets

Using adjustable mount brackets, attach PDU to rack as shown

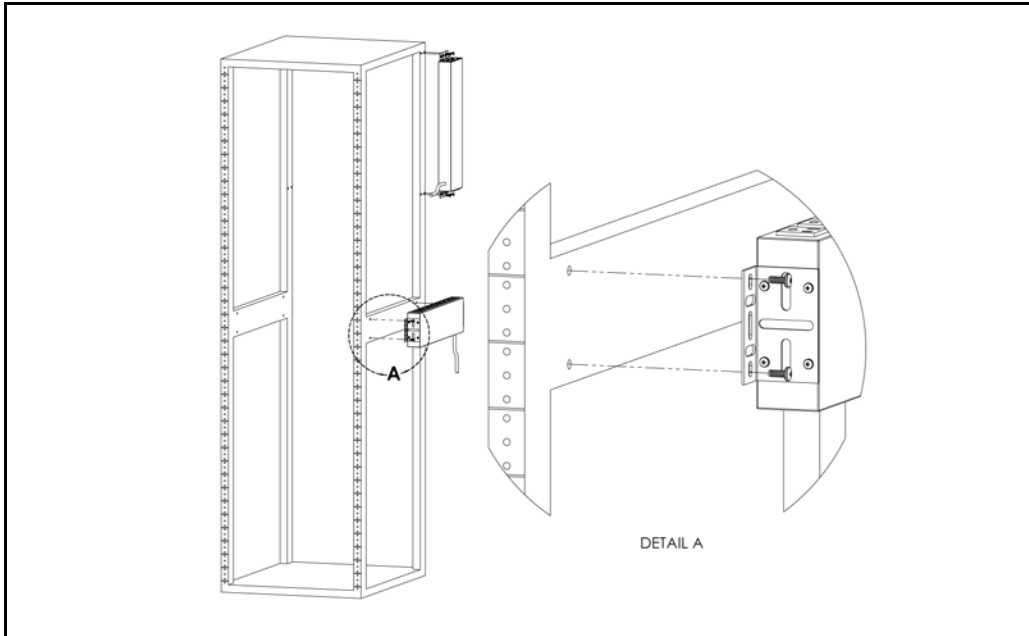


Figure 11: Panel Mount Brackets

Using panel mount brackets, attach PDU to rack as shown

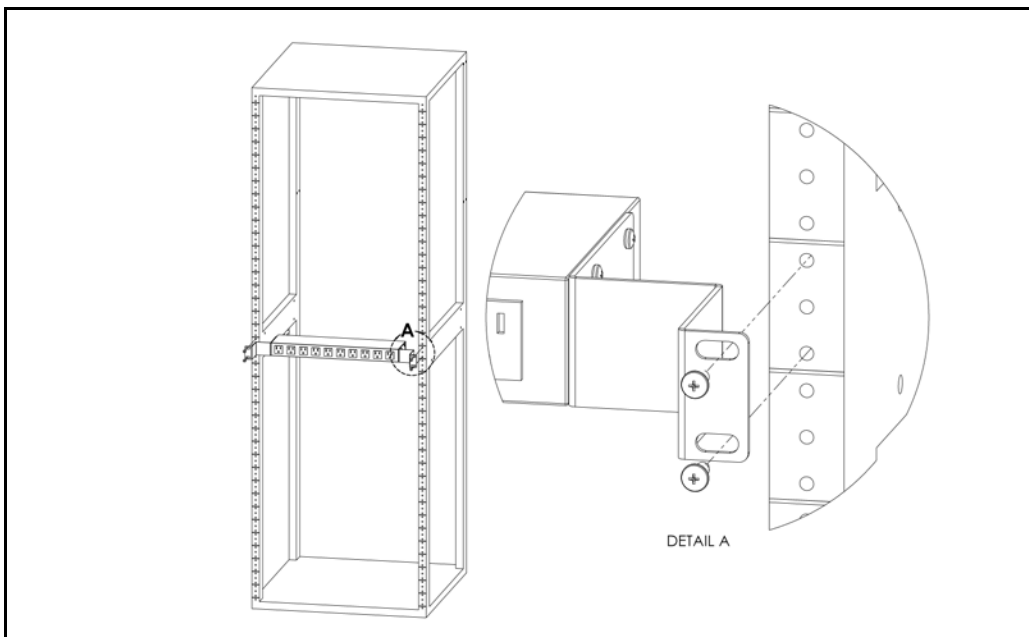


Figure 12: 23" Conversion Mounting Brackets

Using conversion mounting brackets, attach 19" PDU to 23" rack as shown

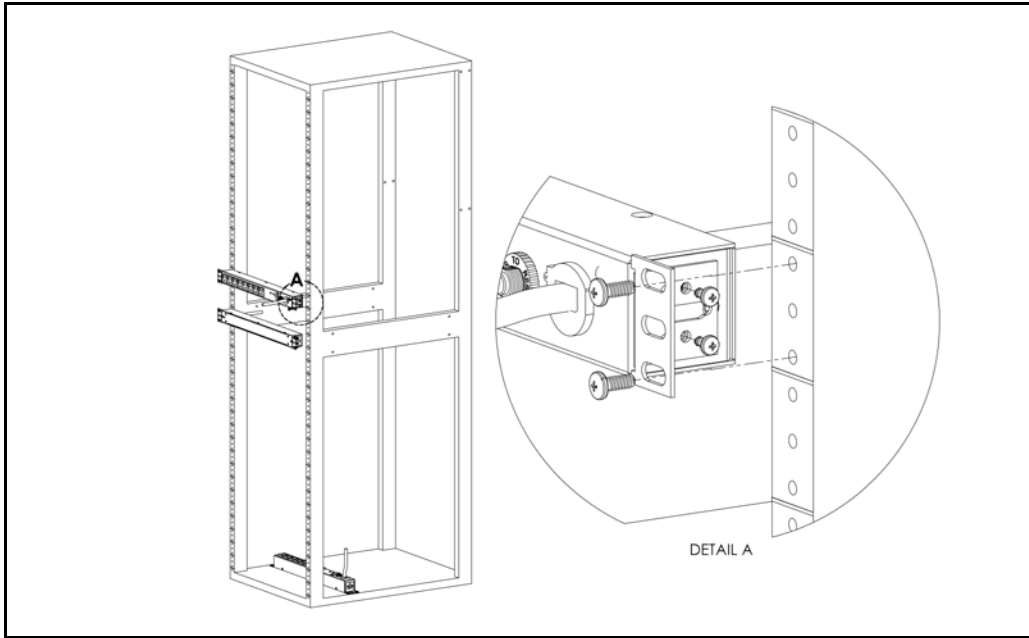


Figure 13: 19" Horizontal/Panel Mount Brackets

Using the 19" horizontal/panel mount brackets, attach PDU to rack as shown

Network Overview

This product comes preconfigured with a default IP address set. Simply connect to the PDU and access the web page with your browser.

Default IP Address

RCX, RCO, RCM-O and RCU-O units have a default IP address for initial setup and access to the unit if the assigned address is lost or forgotten. Once an IP address is assigned to a unit, the default IP address is no longer active. To restore the default IP address, press and hold the reset button located below the network connector for 20 seconds while the unit is powered up. The Idle and Activity lights next to the network connector will both light up when the IP address has been reset. The reset button is accessed through the white, circular hole located below the Ethernet jack.

Note: Pressing the reset button under the network connector will restore the default IP address and will also clear all password settings.

The Configuration page allows you to assign the network properties or use DHCP to connect to your network. Access to the unit requires the IP address to be known, so use of a Static IP or reserved DHCP is recommended. The default address is shown on the front of the unit:

- **IP Address:** 192.168.123.123
- **Subnet Mask:** 255.255.255.0
- **Gateway:** 192.168.123.1

Initial Setup

Connect the RCX, RCO, RCM-O or RCU-O series unit to your computer using a crossover cable or hub/switch.

Windows XP

On your computer, go to "Start > Settings > Control Panel > Network and Dial Up Connections"

Right click on "Local Area Connection" and select "Properties"

Select "Use the following IP address". Use these settings:

- **IP Address:** 192.168.123.1
- **Subnet Mask:** 255.255.255.0
- **Gateway:** Leave blank

Click "OK" twice.

The unit should now be accessible in a web browser via the unit's permanent IP address: <http://192.168.123.123/>. See Unit Configuration (page 28) for details.

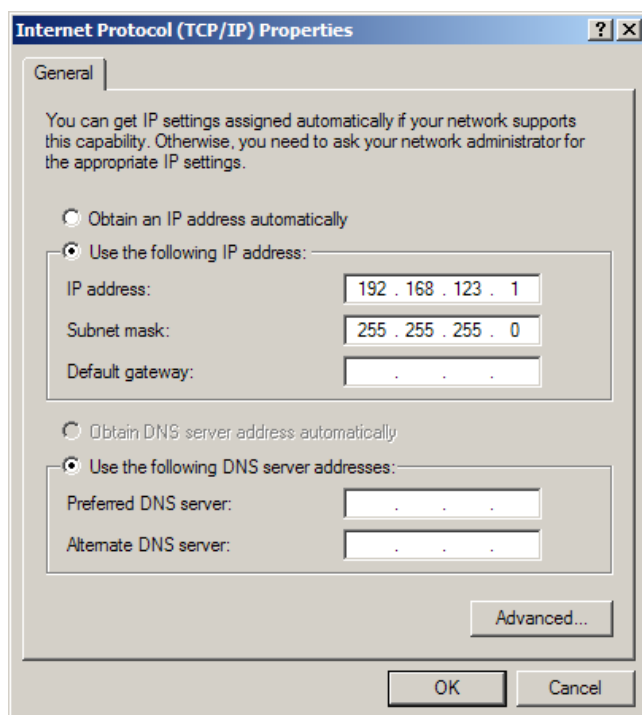


Figure 14: Windows XP network settings for initial setup.

MacOS X 10.5 and 10.6

Open System Preferences via the Dock or the Apple menu.

Select "Network" under "Internet & Network."

Select "Ethernet" from the list on the left side of the window and enter these settings on the right side of the window:

- **Configure:** Manually
- **IP Address:** 192.168.123.1
- **Subnet Mask:** 255.255.255.0
- **Router:** Leave blank

Hit "Apply" and confirm the changes.

The unit should now be accessible in a web browser via the unit's permanent IP address: <http://192.168.123.123/>. See Unit Configuration (page 28) for details.

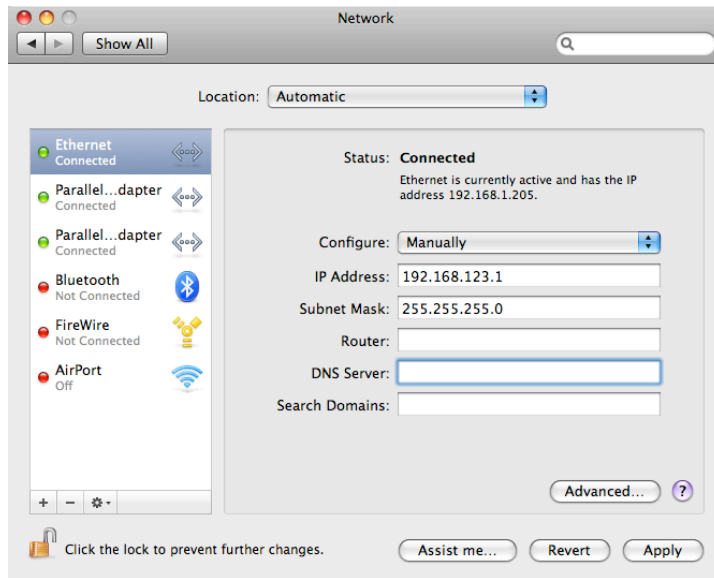


Figure 15: MacOS X network settings for initial setup

Note: Problems connecting to the local PDUs may be caused by the use of proxy servers. Turn off "Use a proxy server for your LAN" or select "Bypass proxy server for local addresses" under your web browser's LAN settings.

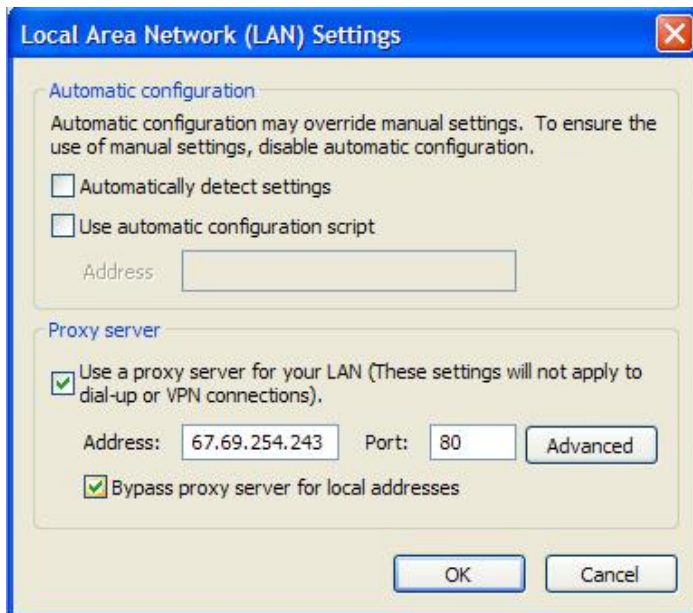


Figure 16: Internet Explorer's LAN Settings for selecting proxy settings

Web Interface

Overview

The unit is accessible via a standard, unencrypted HTTP connection as well as an encrypted HTTPS (SSL) connection. The following web pages are available:

Sensors Page

The front page, *Sensors*, gives both instantaneous and historical views of the unit's data. Real time readings are provided for all power strip data, outlet group data (RCO and RCU-O only), and sensor data next to historical graphs.

For units configured for Wye wiring all readings are based on the line currents; A, B, C.

For units configured for Delta wiring current readings are based on input line current (A, B, C). All other readings (Voltage, Real/Apparent Power, Power Factor and kWatt-Hours) are based on the Phase-to-Phase Load (AB, BC, CA).

Optional cameras may be added and their live snapshots are shown on this page. Plug-and-play sensors appear below the internal sensors when attached.

The menu bar allows access to the rest of the PDU's functionality. Alternate formats for the real-time data can be downloaded in PDA, XML and SNMP formats, and historical data is available in PDA format.

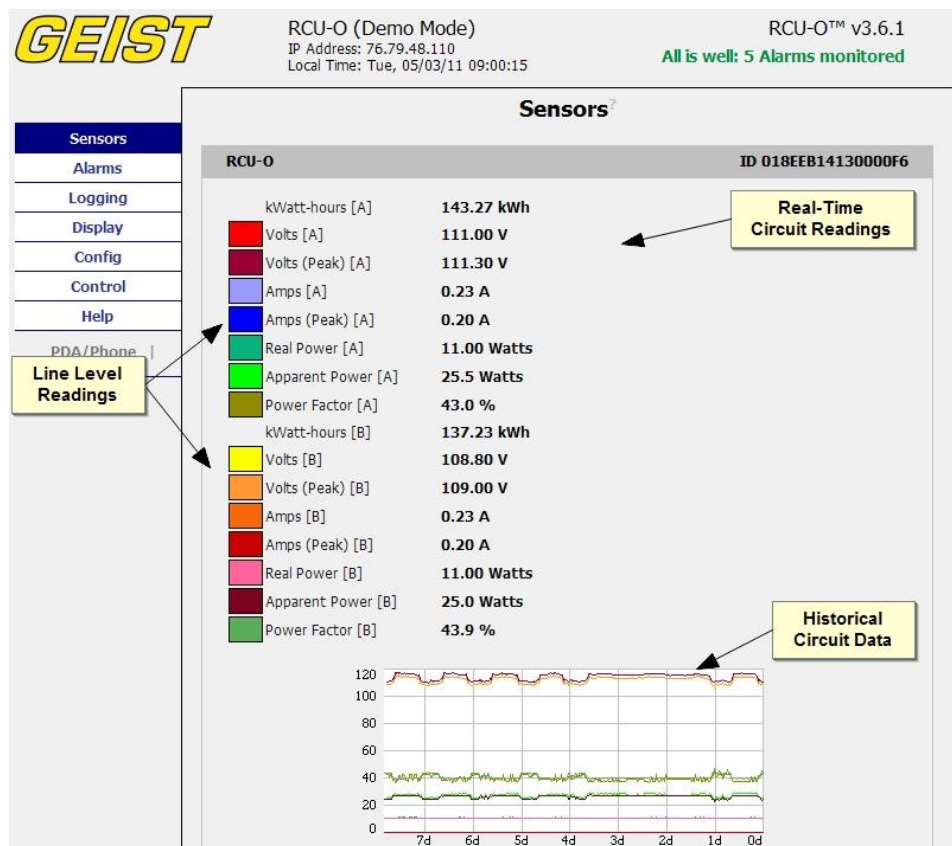


Figure 17: Sensors Page – Wye Configuration

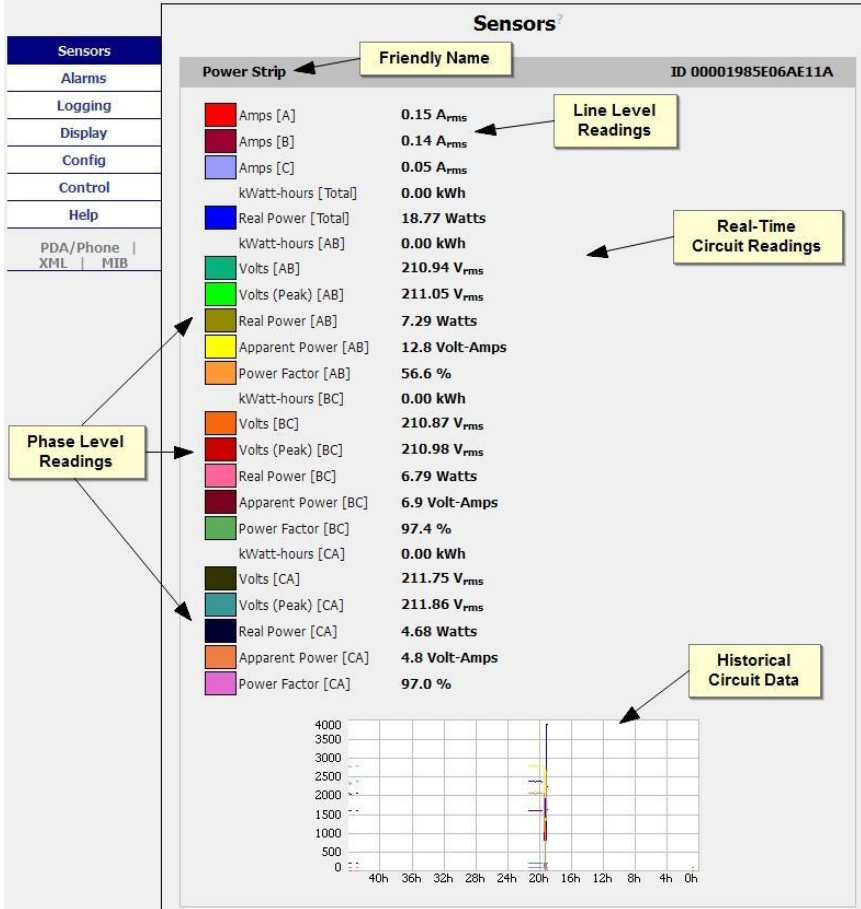


Figure 18: Sensors Page – Delta Configuration

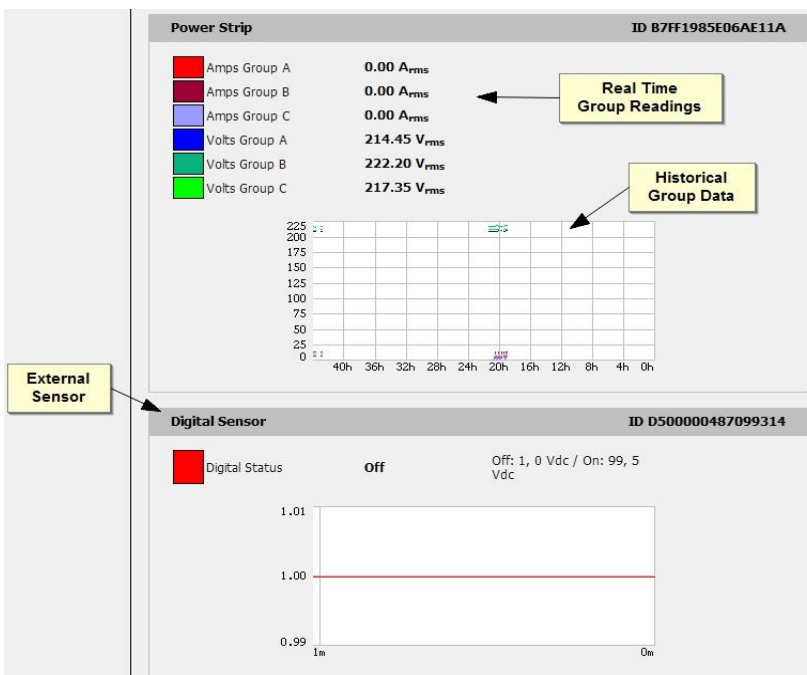


Figure 19: Sensors Page – Group and Sensor Data

Logging Page

The *Logging* page allows the user to access the historical data by selecting the desired sensors and time range to be logged. The Sensor Measurement Data Graph section contains check boxes which allow the user to select which readings are to be graphed on the Logging page and/or displayed on the internal LCD (Delta configuration only) or RSD2X8 remote display module.

The “Logging Control” allows users to select between different modes of logging data.

- **Normal:** Data logged once per minute into data log file.
- **High-water Mark:** High value logged each minute into the data log file.
- **Low-water Mark:** Low value logged each minute into the data log file.
- **Logging Off**

The data will be logged into the data file at a rate of one point per minute and will be available for graphing and display. Please note that although data is logged once per minute, all sensor data used in the real time display and alarm functions is read at least once every 15 seconds for internal sensors and once every 30 seconds for external sensors. Recorded data is available for download in a comma-separated values (CSV) file. To reset the logs click the “Reset Logs” check box and save the changes.

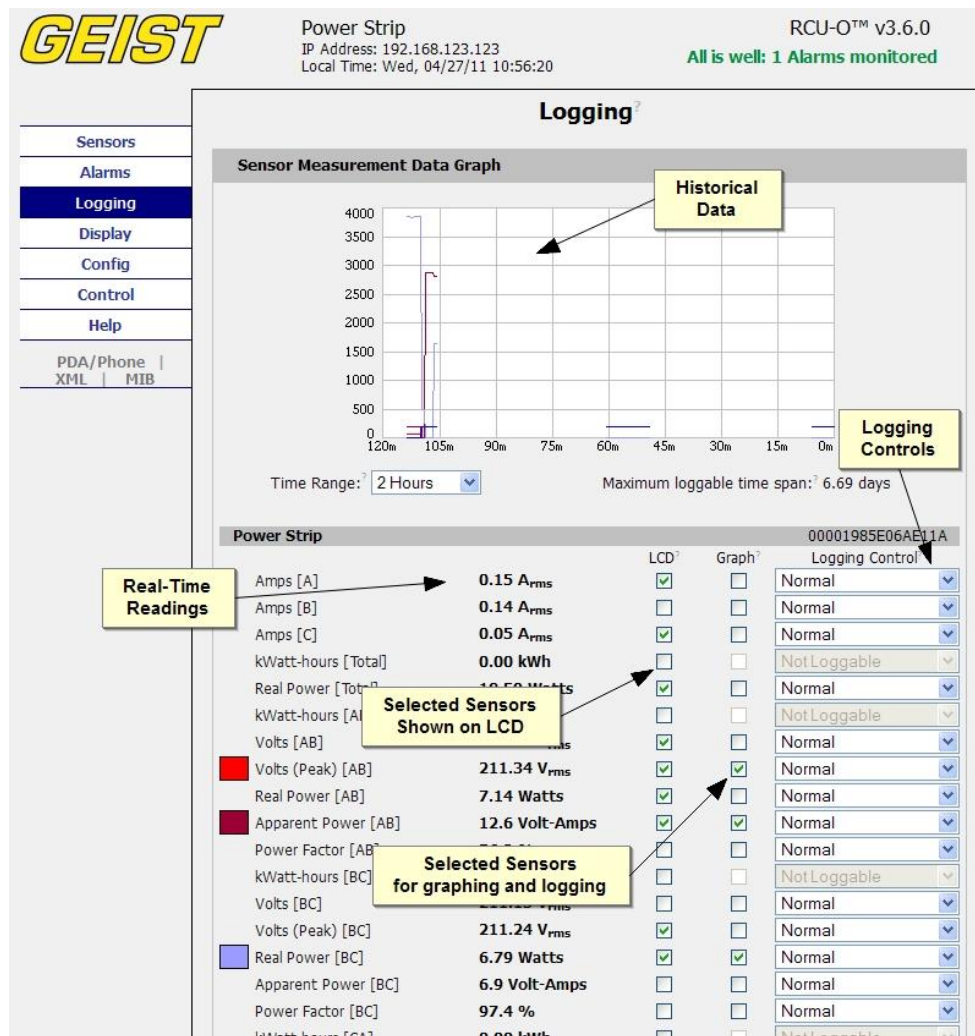


Figure 20: Logging Page

Display Page

The *Display* page allows the user to assign friendly names to attached sensors, change the default unit of measure for all temperature sensors, and change what is scrolling on the LCD display (Measurements or Alarms). The display page also allows the user to select between the default and classic web page layouts. The default interface displays a vertical menu bar to the left of the main window (shown in Figure 19), while the classic interface displays a horizontal menu bar across the top of the screen.

GEIST Power Strip RCU-O™ v3.6.0
IP Address: 192.168.123.123
Local Time: Wed, 04/27/11 10:56:29
All is well: 1 Alarms monitored

Display

General

Default Language: English
Date Format: USA (MM/DD/YY)
Temperature Unit: Fahrenheit
Interface Type: Default
Scroll on LCD: Measurements
Save Changes

Devices

| Unique Address | Device Type | Friendly Name |
|------------------|---------------|----------------|
| 00001985E06AE11A | ctrl3ChDELTA | Power Strip |
| B7FF1985E06AE11A | ctrlGrpAmps | Power Strip |
| D500000487099314 | digitalSensor | Digital Sensor |

☐ Remove all unplugged devices
Save Changes

Setting Friendly Names

Figure 21: Display Page

Alarms Page

The *Alarms* page allows the user to establish alarm conditions for each sensor reading. Alarm conditions can be established with either high or low trip thresholds. The alarms are displayed in different sections based on the device the alarm is associated with. Alarm options include a local Buzzer (with RSD attached), Email and SNMP Trap. See Alarms (page 36) for more details.

GEIST RCM-O Demo (Demo Mode) RCM-O™ v3.6.1
IP Address: 76.79.48.109 All is well: 3 Alarms monitored
Local Time: Wed, 05/11/11 08:28:14

Alarms?

RCM-O Demo ID 010EB36A1300000A

Alarm Type

Amps [A] trips if Above threshold: 3.0

Alarm must remain tripped for 1 (min) before notification?

Repeat every: No Repeat

E-mail

☒ (E-mail 1)
☐ (E-mail 2)
☐ (E-mail 3)

Untripped

Save Changes **Add New Alarm**

Alarm State

Temp Sensor ID 74000001C0E54728

Add New Alarm

External Sensor Alarms

AF/HTD Sensor ID A30000007A345F12

Air Flow trips if Below threshold: 3.0

Alarm must remain tripped for 0 (min) before notification?

Repeat every: No Repeat

E-mail

☐ (E-mail 1)
☒ (E-mail 2)
☐ (E-mail 3)

Untripped

Save Changes **Add New Alarm**

Alarm Behavior

Unplugged Alerts: Enabled

Save Changes

Figure 22: Alarms Page

Control Page (RCM-O and RCU-O Only)

The *Control* page has two sub-tabs; *Actions* and *Settings*. See Remote Outlet Switching (page 41) for details.

Control Actions Tab

The *Actions* tab on the *Control* page gives the user control of the outlets. Outlets can be rebooted or turned on/off with or without pre-programmed delays. The status of each outlet is also shown for verification by the user. For RCU-O series units, outlet readings for current, power and logged kilowatt-hours are also shown.

GEIST Power Strip RCU-O™ v3.6.0t
IP Address: 192.168.123.123
Local Time: Wed, 04/27/11 10:57:17
All is well: 1 Alarms monitored

Control

RCU-O Control

Group A 214.45 V 0.00 A_{rms}

| <input type="checkbox"/> | Outlet | Name | Status | A _{rms} | kWh | Watts | URL |
|--------------------------|--------|----------|--------|------------------|-------|-------|-----|
| <input type="checkbox"/> | 1 | Outlet 1 | On | 0.00 | 7.531 | 0 | |
| <input type="checkbox"/> | 2 | Outlet 2 | On | 0.00 | 0.004 | 0 | |
| <input type="checkbox"/> | 3 | Outlet 3 | On | 0.00 | 1.715 | 0 | |
| <input type="checkbox"/> | 4 | Outlet 4 | On | 0.00 | 0.000 | 0 | |
| <input type="checkbox"/> | 5 | Outlet 5 | On | 0.00 | 5.808 | 0 | |
| <input type="checkbox"/> | 6 | Outlet 6 | On | 0.00 | 0.571 | 0 | |
| <input type="checkbox"/> | 7 | Outlet 7 | On | 0.00 | 3.756 | 0 | |
| <input type="checkbox"/> | 8 | Outlet 8 | On | 0.00 | 0.000 | 0 | |

Group B 222.50 V 0.00 A_{rms}

| <input type="checkbox"/> | Outlet | Name | Status | A _{rms} | kWh | Watts | URL |
|--------------------------|--------|-----------|--------|------------------|-------|-------|-----|
| <input type="checkbox"/> | 9 | Outlet 9 | On | 0.00 | 5.820 | 0 | |
| <input type="checkbox"/> | 10 | Outlet 10 | On | 0.00 | 0.983 | 0 | |
| <input type="checkbox"/> | 11 | Outlet 11 | On | 0.00 | 2.534 | 0 | |
| <input type="checkbox"/> | 12 | Outlet 12 | On | 0.00 | 0.000 | 0 | |
| <input type="checkbox"/> | 13 | Outlet 13 | On | 0.00 | 0.007 | 0 | |
| <input type="checkbox"/> | 14 | Outlet 14 | On | 0.00 | 0.182 | 0 | |
| <input type="checkbox"/> | 15 | Outlet 15 | On | 0.00 | 1.402 | 0 | |
| <input type="checkbox"/> | 16 | Outlet 16 | On | 0.00 | 0.000 | 0 | |

Action:

Figure 23: Control Actions Tab

Control Settings Tab

The *Settings* tab on the *Control* page allows the user to name and define a URL for outlets in addition to setting time delays for each outlet action. Boot up status and sequential boot up options are also available. All delay settings are referenced from the trigger event. This tab also allows the user to restore factory default settings for the outlets.

GEIST

RCU-O (Demo Mode)
 IP Address: 76.79.48.110
 Local Time: Tue, 05/10/11 09:47:24

RCU-O™ v3.6.1
All is well: 5 Alarms monitored

PDA/Phone |
XML | MIB

Help

Settings

Actions

Control

Config

Display

Logging

Alarms

Sensors

Control

RCU-O Configuration

| Group A Outlet | Name | URL | Delay (seconds) | | | Reboot Duration |
|-------------------|-----------|-----|-----------------|-----------|--------|--------------------|
| | | | Power-On | Power-Off | Reboot | |
| 1 | Outlet 1 | | 0 | 0 | 0 | 0 |
| 2 | Outlet 2 | | 0 | 0 | 0 | 0 |
| 3 | Outlet 3 | | 0 | 0 | 0 | 0 |
| 4 | Outlet 4 | | 0 | 0 | 0 | 0 |
| 5 | Outlet 5 | | 0 | 0 | 0 | 0 |
| 6 | Outlet 6 | | 0 | 0 | 0 | 0 |
| 7 | Outlet 7 | | 0 | 0 | 0 | 0 |
| 8 | Outlet 8 | | 0 | 0 | 0 | 0 |
| 9 | Outlet 9 | | 0 | 0 | 0 | 0 |
| 10 | Outlet 10 | | 0 | 0 | 0 | 0 |
| 11 | Outlet 11 | | 0 | 0 | 0 | 0 |
| 12 | Outlet 12 | | 0 | 0 | 0 | 0 |

RCU-O Power On Actions

| Outlet | Name | Delay (seconds) | On | Action Off | Last |
|--------|-----------|-----------------|-----------------------|-----------------------|----------------------------------|
| 1 | Outlet 1 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 2 | Outlet 2 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 3 | Outlet 3 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 4 | Outlet 4 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 5 | Outlet 5 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 6 | Outlet 6 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 7 | Outlet 7 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 8 | Outlet 8 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 9 | Outlet 9 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 10 | Outlet 10 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 11 | Outlet 11 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |
| 12 | Outlet 12 | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |

RCU-O Restore Defaults

Figure 24: Control Settings Tab

Configuration Page

The *Configuration* page has five sub-tabs; *Network*, *Monitoring*, *Diagnostics*, *Event Log*, and *Admin*. See Unit Configuration (page 28) for details.

Configuration Network Tab

The user can enter and update the network settings on the *Network* tab of the *Configuration* page. See Unit Configuration section for details.

The screenshot shows the GEIST RCU-O v3.6.0 web interface. The top header includes the GEIST logo, system status (Power Strip, IP Address: 192.168.123.123, Local Time: Wed, 04/27/11 10:56:41), and version (RCU-O™ v3.6.0). A green status bar indicates "All is well: 1 Alarms monitored".

The left sidebar contains a menu with the following items: Sensors, Alarms, Logging, Display, Config (highlighted), Network (highlighted), Monitoring, Diagnostics, Event Log, Admin, Control, and Help. Below the menu are links for PDA/Phone, XML, and MIB.

The main content area is titled "Configuration" and contains two sections:

- Network**: This section is titled "Current Network Configuration set statically". It contains three radio button options:
 - ☐ Use **DHCP** for Network Configuration and DNS Server Addresses
 - ☐ Use **DHCP** for Network Configuration and **Static** DNS server addresses:
 - ☒ Use **Static** Network Configuration and DNS server addresses:Below these options are input fields for:
 - IP Address: 192.168.123.123
 - Subnet Mask: 255.255.255.0
 - Gateway: 192.168.123.1
 - Primary DNS Server: 8.8.8.8
 - Secondary DNS Server: 8.8.4.4A "Save Changes" button is located at the bottom right of this section.
- Web Server**: This section contains a dropdown menu for "Protocols" set to "HTTP and HTTPS", input fields for "HTTP Port" (80) and "HTTPS Port" (443), and a dropdown menu for "Telnet Service" set to "Enabled". A "Save Changes" button is located at the bottom right of this section.

A yellow callout box labeled "Network Settings" with an arrow points to the IP Address input field.

Figure 25: Configuration Network Tab

Configuration Monitoring Tab

The user can enter and update the email alert, SNMP, and camera settings on the *Monitoring* tab of the *Configuration* page. See Unit Configuration section for details.

GEIST Power Strip IP Address: 192.168.123.123 Local Time: Wed, 04/27/11 14:08:04 RCJ-O™ v3.6.0 All is well: 0 Alarms monitored

Configuration

E-mail

Protocol: SMTP Server: SMTP Port: "From" E-mail Address: Username: Password:

Send alarms to this recipient: Always ☐ Business Hours ☐ After Hours ☐ SMS ☐

To E-mail Address 1: To E-mail Address 2: To E-mail Address 3: To E-mail Address 4: To E-mail Address 5:

Business Hours

Start Time: End Time:

Sun Mon Tue Wed Thu Fri Sat
Week days: ☐ ☒ ☒ ☒ ☒ ☒ ☐

System Status E-Mail Reports

SNMP

SNMP Service: Temperature Precision: Read Community: Listen port for GET: Trap Community: Write Community: Trap Type:

Trap IP Address:port 1: Trap IP Address:port 2:

Initial SNMPv3 data

Unauthenticated User: Authenticated Manager: Manager Authentication Password: Manager Privacy Password: Trap User: Trap Authentication Password: Trap Privacy Password:

Reset User/Access NVRAM will occur during the finish page.

Cameras

Cam 1, IP Address: Model: Username: Password:

Cam 2, IP Address: Model: Username: Password:


Cam 3, IP Address: Model: Username: Password:

Cam 4, IP Address: Model: Username: Password:

Figure 26: Configuration Monitoring Tab

Configuration Diagnostics Tab

The user can update the Syslog settings on the *Diagnostics* tab of the *Configuration* page.



Power Strip
IP Address: 192.168.123.123
Local Time: Wed, 04/27/11 10:56:54

RCU-O™ v3.6.0
All is well: 1 Alarms monitored

Sensors
Alarms
Logging
Display
Config
Network
Monitoring
Diagnostics
Event Log
Admin
Control
Help
PDA/Phone | XML | MIB

Configuration?

Syslog

Facility: LOCAL0

Daemon Address:port 1: 192.168.123.1514
192.168.123.1

Save Changes

Syslog Configuration

| Subsystems | Severity | | | | | | | |
|------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|-------------------------------------|
| | emergency | alert | critical | error | warning | notice | inform | debug |
| os | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| lwip | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| socket | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| macphy | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| flashfl | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| webserv | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| spi0dev | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| device | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
| host | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| setvars | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| dynweb | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| snmp | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| alarms | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| email | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| rtclock | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| sntp | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| dns | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| datalog | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| graphin | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| firmwar | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| msgcatlg | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Save Changes

Figure 27: Configuration Diagnostics Tab

Configuration Event Log Tab

The user can view the Event Log and update the Memory Syslog settings on the *Event Log* tab of the *Configuration* page.

GEIST

Power Strip
 IP Address: 192.168.123.123
 Local Time: Wed, 04/27/11 10:56:59

RCU-O™ v3.6.0
All is well: 1 Alarms monitored

- Sensors
- Alarms
- Logging
- Display
- Config**
- Network
- Monitoring
- Diagnostics
- Event Log
- Admin
- Control
- Help

PDA/Phone |
 XML | MIB

Configuration

NVRAM Event Log

[Click here to view NVM event log](#)

Memory Syslog

```

4/27/2011 15:48:57 setvars:var_init: Reading data from flash succeeded. Me
4/27/2011 15:48:57 lwip :udp_input: udp (192.168.123.255, 137) <-- (192.
4/27/2011 15:48:57 lwip :udp_input:received datagram of length 68
4/27/2011 15:48:57 lwip :ip_input:iphdr->dest 0xff7ba8c0 netif->ip_addr
4/27/2011 15:48:57 setvars:var_init: size of block in flash: 20520, Curren
4/27/2011 15:48:57 setvars:var_init: Current firmware rev [943], data in f
4/27/2011 15:48:57 setvars:var_init: token_read=[VARS BLOCK HERE], from ad
4/27/2011 15:48:57 setvars:var_netstack_push: secondary dns address set to
4/27/2011 15:48:57 setvars:var_netstack_push: primary dns address set to s
4/27/2011 15:48:57 setvars:var_netstack_push: gateway set to 192.168.123.1
4/27/2011 15:48:57 setvars:var_netstack_push: netmask set to 255.255.255.0
4/27/2011 15:48:57 setvars:var_netstack_push: IP address set to 192.168.12
4/27/2011 15:48:57 socket :set static IP to 192.168.123.123
4/27/2011 15:48:57 setvars:var_netstack_push: DHCP status set to 0.
4/27/2011 15:48:57 setvars:var_netstack_push: MAC address was set to 00:19
4/27/2011 15:48:57 setvars:var_netstack_push: secondary dns address set to
4/27/2011 15:48:57 setvars:var_netstack_push: primary dns address set to s
4/27/2011 15:48:57 setvars:var_netstack_push: gateway set to 0.0.0.0.
4/27/2011 15:48:57 setvars:var_netstack_push: netmask set to 0.0.0.0.
4/27/2011 15:48:57 setvars:var_netstack_push: IP address set to 0.0.0.0.
          
```

Memory Syslog

| Subsystems | Severity | | | | | | | |
|------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| | emergency | alert | critical | error | warning | notice | inform | debug |
| os | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| lwip | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| socket | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| macphy | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| flashfl | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| webserv | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| spi0dev | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| device | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| host | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| setvars | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| dynweb | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| snmp | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| alarms | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| email | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| rtclock | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| sntp | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| dns | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| datalog | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| graphin | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| firmwar | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| msgcatlg | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

E-mail ☐ Send logs now

Figure 28: Configuration Event Log Tab

Configuration Admin Tab

The user can set the system clock and administrative information on this tab. Additionally, the user can set administrator and account passwords. See Unit Configuration section for details.

The screenshot displays the 'Configuration Admin Tab' of the GEIST system. The interface includes a sidebar menu on the left with options: Sensors, Alarms, Logging, Display, Config (selected), Network, Monitoring, Diagnostics, Event Log, Admin (selected), Control, and Help. Below the menu are links for PDA/Phone, XML, and HSB.

The main content area is titled 'Configuration' and contains several sections:

- All Parameters:** Includes buttons for 'Reset ALL to Default Values' and 'Refresh DNS Cache'.
- RCU-O Reset kWh:** Includes buttons for 'Reset Circuit A', 'Reset Circuit B', 'Reset Circuit C', and 'Reset all circuits'.
- System Clock, set to GMT:** Features a 'Set Clock method' dropdown set to 'Manual - GMT'. Below are input fields for 'GMT to local, (+/-) hh:mm' (set to -05:00) and a date/time picker (Month: 04, Day: 27, Year: 11, Hour: 15, Minute: 57, Second: 05). A 'Save Changes' button is at the bottom.
- Daylight Saving Time:** Shows 'DST is DISABLED' and an 'Enable DST' dropdown set to 'Disabled'. A 'Save Changes' button is at the bottom.
- Name and Password Configuration:** Contains three password change sections for 'Administrator Account Name' (admin), 'Control Account Name' (control), and 'View Only Account Name' (view). Each section includes fields for 'Old Password', 'New Password', and 'New Password Again', with a warning: 'Warning: Record your password. Loss of password may require 48 hours to recover.' A 'Save Changes' button is at the bottom.
- Admin Info:** Includes input fields for 'Contact Name', 'Contact Email' (with a '(sysContact)' placeholder), 'Contact Phone', 'Device Location' (with a '(sysLocation)' placeholder), and 'Device Description' (with a '(sysName)' placeholder). A 'Save Changes' button is at the bottom.
- Saved Configuration XML File:** Includes a file input field with a 'Browse...' button, an 'Upload Local XML File' button, and a 'Download Current XML File' link.
- SSL Certificate and Private Key:** Shows a status 'SSL Certificate and Private Key are **INVALID**'. It includes input fields for 'SSL Certificate File' and 'SSL Private Key File', each with a 'Browse...' button. There are buttons for 'Upload SSL Files' and 'Erase SSL Data'.
- Upload System Firmware:** Includes a file input field with a 'Browse...' button and an 'Upload New Firmware' button. A note at the bottom states: 'Firmware upload may take a few minutes. Please wait for response from browser.'

Figure 29: Configuration Admin Tab

Unit Configuration

Network Configuration

The unit's network configuration is set on the *Network* tab of the *Configuration* page. Settings pertaining to the unit's network connection are:

The screenshot displays the 'Network' configuration tab. At the top, it states 'Current Network Configuration set statically'. Below this, there are three radio button options: 'Use DHCP for Network Configuration and DNS Server Addresses', 'Use DHCP for Network Configuration and Static DNS server addresses:', and 'Use Static Network Configuration and DNS server addresses:'. The third option is selected. Below the radio buttons are input fields for 'IP Address' (76.79.48.112), 'Subnet Mask' (255.255.255.224), 'Gateway' (76.79.48.97), 'Primary DNS Server' (208.67.222.222), and 'Secondary DNS Server' (208.67.222.220). A 'Save Changes' button is located below these fields. Below the Network section is the 'Web Server' section, which includes a 'Protocols' dropdown menu set to 'HTTP and HTTPS', 'HTTP Port' (80), 'HTTPS Port' (443), and 'Telnet Service' (Enabled). A 'Save Changes' button is also present for the Web Server section. At the bottom of the page, there are language selection options: 'English' and 'Español'.

Figure 30: Network Configuration

- **DHCP:** Allows the unit to request a dynamic IP address from a server on the network.
- **Static IP Address/Net Mask/Gateway:** When not using a dynamic address, enter static network configuration information here.

Telnet Service: Enable or disable the built-in Telnet server. See

- Telnet (page 33) for details.
- **HTTP Services:** Enables/disables access via HTTP and HTTPS. Available options are: HTTP and HTTPS, HTTP only, and HTTPS only. It is not possible to disable the web interface completely.
- **HTTP/HTTPS Server Port:** Changes the TCP port that each server listens on.
- **DNS Servers:** Allows the unit to resolve host names for Email, NTP and SNMP servers as well as cameras.

Time and Date

The system clock is set on the *Admin* tab of the *Configuration* page. The unit comes preconfigured with the IP addresses of two NIST time servers and is set to the Central Time Zone (-0500 GMT). Should a local time server be preferred, select "NTP Server" from the "Set Clock method" drop-down menu, enter its IP address into the "NTP primary server" box and click "Save Changes". Clearing the time server addresses and clicking "Save Changes" will set the time servers back to the defaults. The unit attempts to contact the time servers during boot up and periodically while running. Until a time server is contacted or the system clock is manually set, all log time stamps will present time as the number of seconds since the unit was powered up and graphs will not be shown.

The clock can also be setup to automatically change for Daylight Savings Time when needed. When enabled, the user can select the dates and times for the clocks to adjust.

Note: Enabling automatic DST or setting the time zone offset forward and backward will cause a gap or overwriting of logs.

The image shows two configuration panels. The top panel, titled "System Clock, set to GMT", has a "Set Clock method:" dropdown menu set to "Manual - GMT". Below it is a "GMT to local, (+/-)hh:mm" field set to "-05:00". There are six input fields for date and time: "Month" (05), "Day" (05), "Year" (11, with "(yy)" below it), "Hour" (14, with "(0-23)" below it), "Minute" (48, with "(0-59)" below it), and "Second" (01, with "(0-59)" below it). A "Save Changes" button is at the bottom. The bottom panel, titled "Daylight Saving Time", has a sub-header "Operating in: Daylight Saving Time". It features an "Enable DST:" dropdown menu set to "Enabled". Below are "DST Start:" and "DST End:" settings. "DST Start:" is set to "2nd" (dropdown), "Sun" (dropdown), "in" (text), "Mar" (dropdown), "at" (text), and "00:00" (dropdown). "DST End:" is set to "1st" (dropdown), "Sun" (dropdown), "in" (text), "Dec" (dropdown), "at" (text), and "00:00" (dropdown). A "Save Changes" button is at the bottom.

Figure 31: Manual Time Settings

The image shows the "System Clock, set to GMT" configuration panel. The "Set Clock method:" dropdown menu is set to "NTP Server". Below it is the "GMT to local, (+/-)hh:mm" field set to "-05:00". There are two NTP server address fields: "NTP primary server" and "NTP secondary server", both containing the IP address "192.43.244.18" and "129.6.15.28" respectively. Below these is a "Sync to NTP server period (seconds)" field set to "1800". A "Save Changes" button is at the bottom.

Figure 32: NTP Time Settings

The time, date, IP address and friendly name of the unit are displayed at the top of each web page.

RCU-O
IP Address: 192.168.120.42
Local Time: Thu, 05/07/09 15:46:46

Figure 33: Time and Date Display

E-Mail/ Business Hours

The e-mail and business hours configuration are set on the *Monitoring* tab of the *Configuration* page. The unit is capable of sending e-mail to as many as five addresses at once. Most SMTP and ESMTP servers are compatible. Authentication options are None, POP3 (POP-before-SMTP) or ESMTP. The unit can be configured to send alarm emails always, only during business hours or only after hours by selecting the desired option next to each email address.

The screenshot displays two configuration sections: 'E-mail' and 'Business Hours'.

E-mail Configuration:

- Protocols: ESMTP/TLS/SSL (dropdown menu)
- SMTP Server: [text input field]
- SMTP Port: 25 (text input field)
- "From" E-mail Address: [text input field]
- Username: [text input field]
- Password: [text input field]
- Send alarms to this recipient: Always Business Hours? After Hours? SMS?
- To E-mail Address 1: [text input field] [radio button] [radio button] [radio button] [checkbox]
- To E-mail Address 2: [text input field] [radio button] [radio button] [radio button] [checkbox]
- To E-mail Address 3: [text input field] [radio button] [radio button] [radio button] [checkbox]
- To E-mail Address 4: [text input field] [radio button] [radio button] [radio button] [checkbox]
- To E-mail Address 5: [text input field] [radio button] [radio button] [radio button] [checkbox]
- Save Changes (button)
- Send Test E-Mail (button)

Business Hours Configuration:

- Start Time: 09:00 (text input field)
- End Time: 17:00 (text input field)
- Week Days: Sun Mon Tue Wed Thu Fri Sat
- Week Days: [checkbox] [checkbox] [checkbox] [checkbox] [checkbox] [checkbox] [checkbox]
- Save Changes (button)

Figure 34: E-Mail Configuration

An SMTP server as well as "From" and "To" addresses are required to send e-mails. Some mail servers may require a username and password. In most cases, the username does not have to match the "From" address, but does need to be a valid user on the authenticating server. Microsoft Exchange servers will have to be set to allow SMTP relay from the IP address of the unit. In addition, a test email can be sent from the bottom of the *Monitoring* tab of the *Configuration* page.

Note: The unit cannot receive e-mails. The POP3 server is used strictly for authentication and is not required when the protocol is set to ESMTP or None.

Status Reports

When enabled, the unit will periodically send a full status report to all "To" e-mail addresses selected for the report. The report includes current unit data from all attached sensors as well as alarm states. Reporting frequency options are: weekly, hourly, every 2, 3, 4, 6, 8, 12, 24, or 48 hours. E-mail addresses are selected when the report is created by checking the corresponding e-mail destination box. Allowing the cursor to hover over an e-mail destination box will display the e-mail address that the box is associated with.

System Status E-Mail Reports

Report Time: hour min
(0-23) (0-59)

Report Period: ▼

E-mail Destinations: ☐ ☐ ☐ ☐ ☐

Delete This Report: ☐

Figure 35: Email Report Settings

SNMP

The unit supports retrieval of all data via Simple Network Management Protocol (SNMP) v1, v2c, and v3. In addition, alarm traps can be sent to up to two IP addresses. The SNMP configuration is entered on the *Monitoring* tab of the *Configuration* page.

SNMP

SNMP Service:

Temperature Precision:

Read Community:

Listen port for GET:

Trap Community:

Write Community:

Trap Type:

Trap IP Address:port 1:

Trap IP Address:port 2:

Figure 36: SNMP Configuration

Initial SNMPV3 data

Unauthenticated User:

Authenticated Manager:

Manager Authentication Password:

Manager Privacy Password:

Trap User:

Trap Authentication Password:

Trap Privacy Password:

Reset User/Access NVRAM will occur during the finish page.

Figure 37: Initial SNMP V3 Data

The default community string is "public" and the MIB is downloadable via a link on the web pages menu bar.

Accounts and Passwords

The RCX, RCO, RCU-O and RCM-O offer account security options that are entered on the *Admin* tab of the *Configuration* page. There are three levels of account security:

- **Administrator:** Password protects the Display, Alarms and Configuration pages along with protecting the Telnet and Serial access.
- **Control Access:** Password protects the Control Actions and Control Settings pages.
- **View-Only:** Password protects the Sensors, PDA, WAP and XML pages.

Name and Password Configuration

NOTE 1: If Account currently has a password, leaving Old Password blank results in no changes to that account.
NOTE 2: Administrator password may be used in the Old Password field of any account.
NOTE 3: If setting New Password to blank, Account Name must also be blank.
NOTE 4: If New Password is not blank, Account Name must not be blank.

Administrator Account Name

If blank, all access is granted without a password.

Old Password

New Password

New Password Again (again, to confirm)

Warning: Record your password. Loss of password may require 48 hours to recover.

Control Account Name

If blank, Control and View Only access is granted without a password.

Old Password

New Password

New Password Again (again, to confirm)

Warning: Record your password. Loss of password may require 48 hours to recover.

View Only Account Name

If blank, View access is granted without a password.

Old Password

New Password

New Password Again (again, to confirm)

Warning: Record your password. Loss of password may require 48 hours to recover.

Figure 388: Account Configuration

User account names may include alphanumeric characters, spaces and underscores. Passwords may include alphanumeric characters and underscores.

Note: The Administrator account must be active to enable the Control Access and View-Only accounts.

Note: The Control Access account must be active to enable the View-Only account.

Note: The account names "root" and "admin" are disabled for security reasons and cannot be re-enabled.

Warning: Record your passwords. To reset lost passwords, follow the instructions for resetting the unit's IP address and passwords given in the Default IP Address section. To generate a temporary recovery password to access the unit, contact customer service from a location where the unit can be accessed via the internet.


Telnet

The unit provides a Telnet server for basic monitoring via the command line. The Administrator account must be enabled to use the Telnet interface. Type "help" after logging in to the unit to see a list of available commands. The Telnet service can be disabled under "Web Server" on the *Network* tab of the *Configuration* page.

Note: All data sent via Telnet is unencrypted. Some settings can be changed and user names and network settings are available via Telnet. In unsecure environments, it is recommended that Telnet be disabled.

Camera Configuration

Enter the domain names/IP addresses and models of up to four IP-addressable network cameras in the "Cameras" section of the *Monitoring* tab on the *Configuration* page. The unit will present a linked snapshot from each camera on the *Sensors* page.

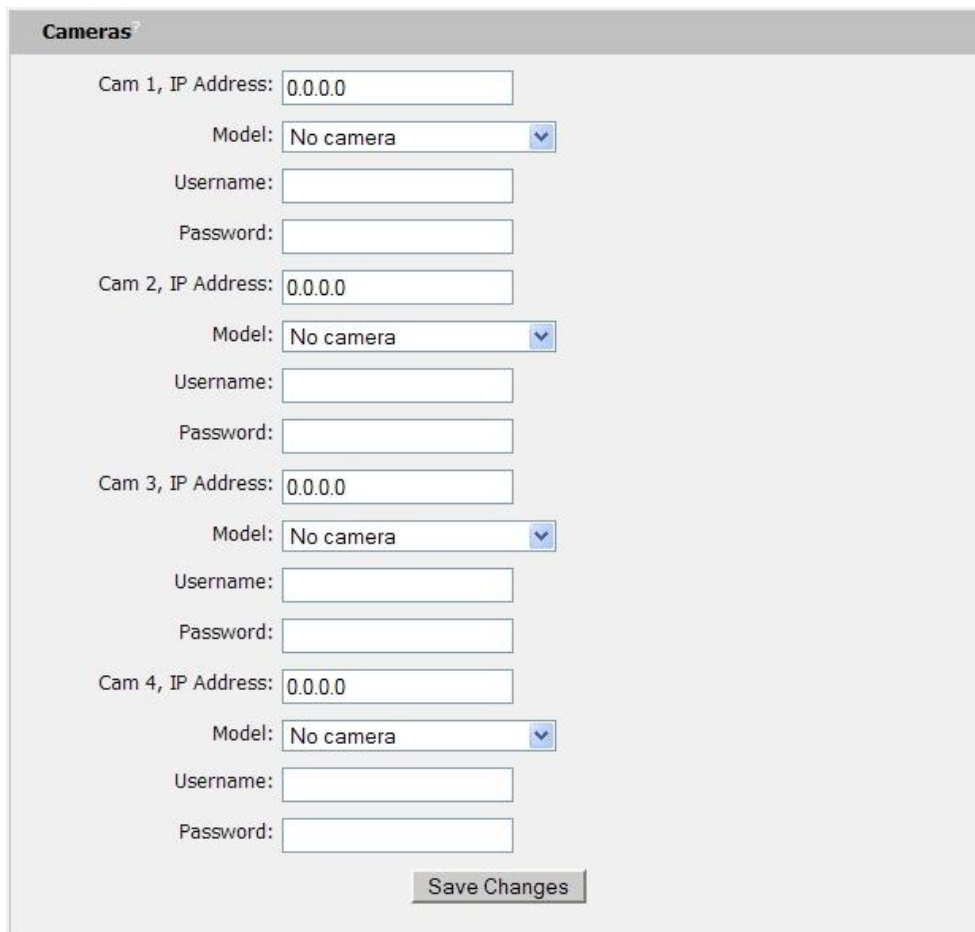

The screenshot shows a web interface titled "Cameras" with a light gray background. It contains four identical camera configuration sections, each with the following fields:

- Cam 1, IP Address:
- Model: (with a dropdown arrow)
- Username:
- Password:


Below these fields are the same four fields for Cam 2, Cam 3, and Cam 4. At the bottom right of the form is a button labeled "Save Changes".

Figure 39: Configuration and Supported Models

Note: Each camera must be set to allow anonymous access to enable this feature.

Admin Information

Information entered in the "Admin Info" section of the *Admin* tab of the *Configuration* page will show up at the bottom of the unit's web interface.

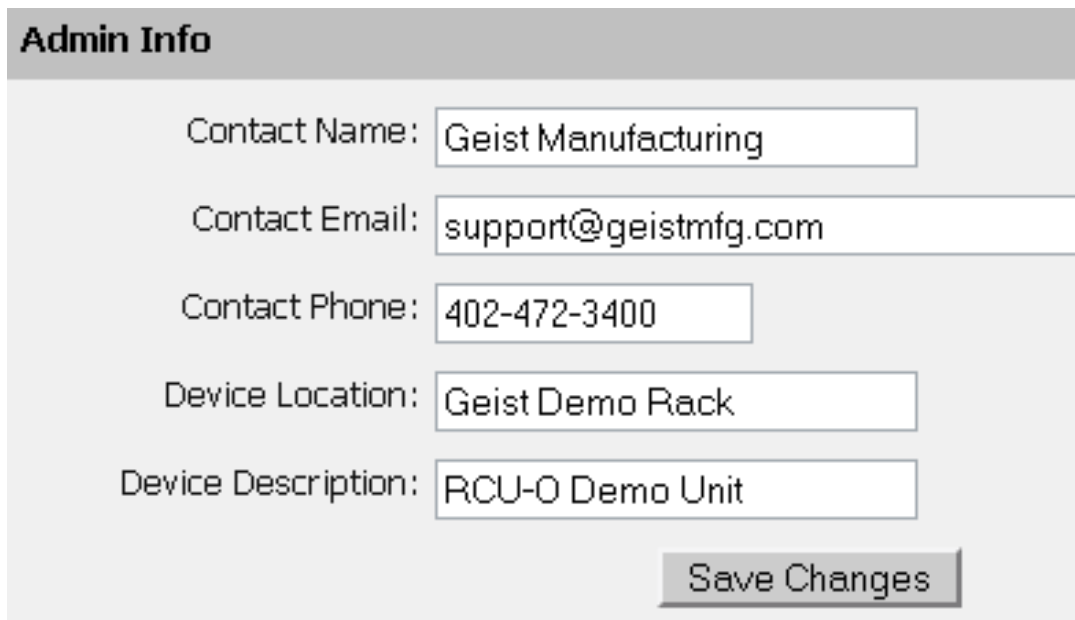

The 'Admin Info' form contains the following fields and values:

| Field | Value |
|---------------------|----------------------|
| Contact Name: | Geist Manufacturing |
| Contact Email: | support@geistmfg.com |
| Contact Phone: | 402-472-3400 |
| Device Location: | Geist Demo Rack |
| Device Description: | RCU-O Demo Unit |

A 'Save Changes' button is located at the bottom right of the form.

Figure 40: Admin Information Fields



Unit Location: Geist Demo Rack
Unit Description: RCU-O Demo Unit
Admin: [Geist Manufacturing](#) or Call 402-472-3400
Support: support@geistmfg.com or Call 800.432.3219
Copyright © 2003-2009 [Geist Manufacturing](#) All Rights Reserved.

Figure 41: Admin Information Display

Kilowatt-Hours Reset

The RCX, RCO, RCU-O and RCM-O's kilowatt-hours measurements are zeroed at the factory and can be reset at any time, should it become necessary. On the *Admin* tab of the *Configuration* page, simply hit the button that corresponds to the desired circuit to be reset.



The 'RCU-O Reset KWh' form contains three buttons:

- Reset Circuit A
- Reset Circuit B
- Reset all circuits


Figure 42: Kilowatt Hours Reset

XML File Backup

The RCX, RCO, RCU-O or RCM-O unit's configuration is stored in the XML file. The XML file can be downloaded and stored in order to backup the unit's current configuration settings. On the *Admin* tab of the *Configuration* page, simply hit the Download Current XML File button to download the XML file.

A previously downloaded XML file can be uploaded to the unit in order to restore the unit's configuration to match the configuration contained in the XML file. On the *Admin* tab of the *Configuration* page, click the Upload Local XML file button to upload a local XML file.

Note: XML files are unit specific, and should only be uploaded to the unit that it was downloaded from.

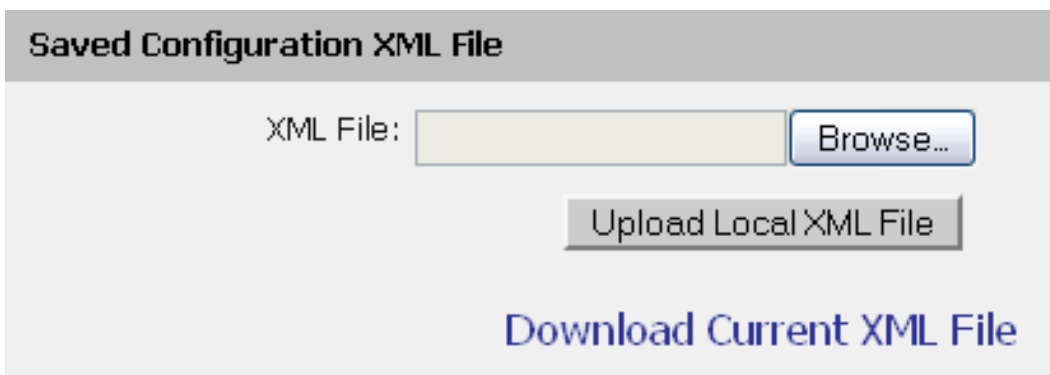

The screenshot shows a web interface titled "Saved Configuration XML File". It features a text input field labeled "XML File:" followed by a "Browse..." button. Below this is a button labeled "Upload Local XML File". At the bottom, there is a large blue text link that says "Download Current XML File".

Figure 43: XML File Upload

SSL Certificate Upload

The unit will automatically generate a unique SSL Certificate and Private Key. Alternatively, a custom SSL Certificate and Private Key can be uploaded to the unit by pressing the "Upload SSL Files" button on the *Admin* tab of the *Configuration* page. The SSL certificate and key file must be in Distinguished Encoding Rules (DER) format. The SSL Certificate and Private Key can be cleared by clicking the "Erase SSL Data" button on the *Admin* tab of the *Configuration* page.



The screenshot shows a web interface titled "SSL Certificate and Private Key". At the top, a status message reads "SSL Certificate and Private Key are **INVALID**". Below this, there are two text input fields: "SSL Certificate File:" and "SSL Private Key File:", each followed by a "Browse..." button. At the bottom, there are two buttons: "Upload SSL Files" and "Erase SSL Data".

Figure 44: SSL Certificate and Private Key Upload

Alarms

Alarm Notifications

The RCX, RCO, RCU-O and RCM-O support three types of alarm notification:

- **E-Mail:** The unit can be configured to send alarm e-mails to up to five recipients.
- **SNMP:** The unit can be configured to send SNMP traps to up to two trap servers.
- **Buzzer:** When a remote display (RSD2X8) is attached, the unit can turn on an audible alarm.

The unit is capable of any combination of the above alarms at once. Alarm type combinations are selected per alarm via the check boxes which are displayed for each alarm on the Alarms page.

RCM-O Demo ID 010EB36A1300000A

Amps [A] trips if Above threshold: 3.0

Alarm must remain tripped for 1 (min) before notification

Repeat every: No Repeat

E-mail

☒ (E-mail 1)

☐ (E-mail 2)

☐ (E-mail 3)

Untripped

Figure 45: Alarm State Menu

Alarm Types

The RCX, RCO, RCU-O and RCM-O provide three types of alarm messages via E-Mail and SNMP:

- **Trip:** Occurs when a sensor value goes above a high trip threshold or below a low trip threshold.
- **Unplugged:** Occurs when a sensor with an alarm set loses contact with the main unit due to the sensor being physically unplugged or another communications error. Unplugged alerts can be enabled or disabled on the *Alarms* page.
- **Clear:** Occurs when a sensor already in the Tripped or Unplugged state goes back into its normal range.

Alarms can be added for each internal device or external sensor displayed on the *Alarms* page. An alarm is added by pressing the "Add New Alarm Button" and selecting the sensor value to be monitored from the drop down menu.

Thresholds

The user must set a trip threshold and type for each alarm that is added to the *Alarms* page. The threshold type is chosen as either "Below" or "Above" from a drop down menu when the alarm is created. The threshold value is typed into a data window when the alarm is created. Alarms are triggered based on the selected sensor's data and the trip threshold type and value. Alarm settings can be edited or deleted at any time.

Analysis of each unit is recommended before setting alarm thresholds as some of the values monitored by the unit are relative values, whose scale will differ slightly between units. Allow each unit to operate under normal, steady state conditions for several hours before setting alarm thresholds. By allowing the sensors to operate for several hours, the user can better understand what the normal variations are; thereby allowing the user to choose alarm thresholds that will not trigger numerous false alarms.

Alarms can be set to only send notification if the alarm is in a tripped state for a certain amount of time. The user sets the amount of time required by entering a value from 0-240 minutes in the text box on the *Alarms* page. Additionally, alarm notifications can be set to send multiple notifications for an alarm that remains in a tripped state. The alarm notifications are set to repeat at intervals of no repeat, 10, 30, or 60 minutes by selecting the desired option in the drop down menu on the *Alarms* page.

Note: Changes in settings take a few moments to become active. Rapidly resetting alarm values may not provide the desired results. Allow up to 2 minutes after changing a setting before modifying it again.

Sensors

Overview

All internal sensors are measured every 15 seconds. External sensors are measured every 15 to 30 seconds, depending on the number of devices connected. Sensor data collected by the RCX, RCO, RCU-O and RCM-O unit gives useful trend analysis data. While all values are not absolute in relation to a known unit, trend analysis of the data allows users to view changes and draw useful conclusions about what is happening over time in the monitored environment.

Note: DM series units are connected as sensors and collect a large amount of data. These will take longer than the usual 15 to 30 second for the RCX, RCO, RCU-O and RCM-O units to measure.

Internal Sensors

The RCX, RCO, RCU-O and RCM-O units contain internal sensors that are configured in two different ways:

Wye Configuration

- **Total Unit**
 - Kilowatt-Hours: Cumulative sum of Real Power for all lines.
 - Real Power: Total average of instantaneous voltage and current on all lines over last 1.5 seconds.
- **Line Level (A, B, C):**
 - Kilowatt-Hours: Cumulative sum of Real Power.
 - Volts: Measures instantaneous RMS voltage.
 - Volts (Peak): Reports the highest reported voltage since the last time the data was updated, typically every 15 seconds.
 - Real Power: Average of instantaneous voltage and current over last 1.5 seconds.
 - Apparent Power: The product of instantaneous RMS Voltage and RMS Current.
 - Power Factor: The ratio of Real Power to Apparent Power.
 - Amps: Measures instantaneous RMS current.
 - Amps (Peak): Reports the highest reported current since the last time the data on the screen

Delta Configuration

- **Total Unit**
 - Kilowatt-Hours: Cumulative sum of Real Power for all lines.
 - Real Power: Total average of instantaneous voltage and current on all lines over last 1.5 seconds.
- **Phase Level (AB, BC, CA):**
 - Kilowatt-Hours: Cumulative sum of Real Power.
 - Volts: Measures instantaneous RMS voltage.
 - Volts (Peak): Reports the highest reported voltage since the last time the data was updated, typically every 15 seconds.
 - Real Power: Average of instantaneous voltage and current over last 1.5 seconds.
 - Apparent Power: The product of instantaneous RMS Voltage and RMS Current.
 - Power Factor: The ratio of Real Power to Apparent Power.
- **Line Level (A, B, C):**
 - Amps: Measures instantaneous RMS current.

The RCU-O contains the following additional onboard sensors:

- **Group Volts:** Measures instantaneous RMS voltage for a group of outlets.
- **Group Amps:** Measures instantaneous RMS current for a group of outlets.
- **Outlet Amps:** Measures instantaneous RMS current for each outlet.
- **Outlet Real Power:** Average of instantaneous voltage and current over last 1.5 seconds for each outlet.
- **Outlet Kilowatt-Hours:** Cumulative sum of Real Power for each outlet.

Remote Sensors

Available Sensors:

- **RT:** Temperature
- **GTHD:** Temperature / Humidity / Dew Point
- **GT3HD:** Temperature / Humidity / Dew Point with ability to add two RT sensors
- **RTAFHD3:** Temperature / Air Flow / Humidity / Dew Point
- **CCAT:** Converts analog I/O Sensors to Remote Digital Sensors
- **IOE:** Expands the number of I/O and sensor ports and adds relays
- **DM:** Remote digital RMS current Meter
- **RS2:** Remote power monitoring and switching

*RTAF, RTAFH & RTHD sensors have been discontinued and replaced by the RTAFHD3 sensor. Some Geist R-Series devices may require a firmware update to allow for proper compatibility with the new RTAFHD3 sensors.

If your Geist R-Series device is using firmware version 2.xx you will want to make sure you are using firmware version 2.94 or newer.

If your Geist R-Series device is using firmware version 3.xx you will want to make sure you are using firmware version 3.5.0 or newer.

Please contact Geist Support at 800-432-3219 if you need assistance locating your current version or upgrading to the new firmware version

RTAFHD3 Compatibility

The (G)RTAFHD3 sensor cannot be utilized in combination with the discontinued (G)RTAF and (G)RTAFH sensors or (G)RTHD sensors built prior to 2010. If you desire to add (G)RTAFHD3 sensors to an existing installation currently utilizing incompatible sensors, please contact Customer Service for installation options.

Connecting Remote Sensors

Plug-and-play remote sensors may be attached to the unit at any time via the RJ-12 connectors on the face of the unit. In some cases splitters may be required to add additional sensors. Each sensor has a unique serial number and is automatically discovered and added to the web page. Up to sixteen sensors may be connected (15 on RCU-O).

The display order of the sensors on the web page is determined by the serial number of each sensor. Friendly names for each sensor can be customized on the *Display* page.

Note: The sensors use Cat. 3 wire and RJ12 connectors. Wiring must be straight-through: reverse polarity will temporarily disable all sensors until corrected.

Note: The sensors use a low voltage serial communication protocol and are subject to network signaling constraints dependent on shielding, environmental noise, and length of wire. Typical installations allow runs of up to 600 feet of sensor wire.

Data Logging and Display

All sensor data collected by the unit can be graphed, except kilowatt-hours and outlet level data (RCU-O only). The *Logging* page allows the user to select data to be logged. The user can also choose to view a graph of any logged data. Selected sensor values are logged into the data file at a rate of one point per minute. The number of selected sensors determines the maximum data logging time span. This period is calculated and displayed on the *Logging* page. The oldest data will be deleted when the onboard memory fills up in order to make room for new data. Sensor values can also be selected for display on the local LCD or optional Remote Display (RSD2X8).

Remote Outlet Switching (RCM-O and RCU-O Only)

Actions

The RCM-O and RCU-O Series are equipped with individually switchable outlets. There are seven possible actions for any given outlet, available from the “Action” drop down box on the *Actions* tab of the *Control* page:

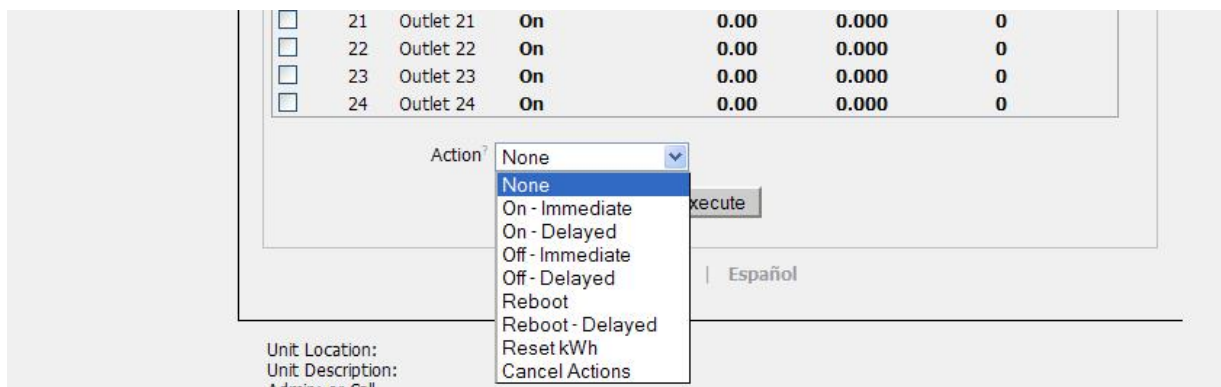


Figure 46: Outlet Actions

- **On – Immediate:** Turns on all selected outlets with no delay.
- **On – Delayed:** Turns on all selected outlets with applicable delays.
- **Off – Immediate:** Turns off all selected outlets with no delay.
- **Off – Delayed:** Turns off all selected outlets with applicable delays.
- **Reboot:** Cycles power to the selected outlets with one applicable delay. Each outlet is powered-down immediately, then “Reboot Duration” sets the delay after power-down and before power-up.
- **Reboot-Delayed:** Cycles power to the selected outlets with two applicable delays. “Reboot” delays before power down, and “Reboot Duration” sets the delay after power-down and before power-up.
- **Reset kWh:** Resets the kWh total on all selected outlets to 0. (RCU-O only)
- **Cancel Actions:** Cancels any actions currently in progress on the selected outlets.

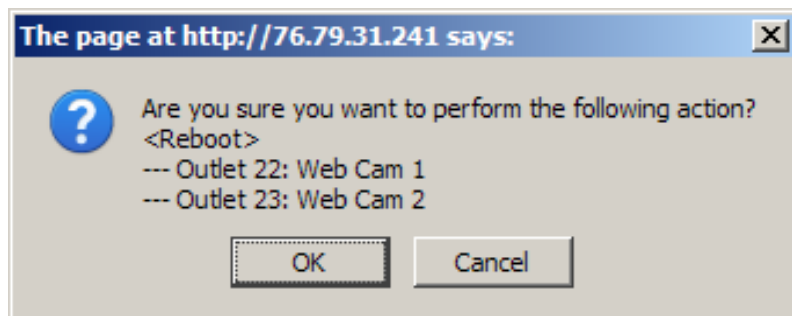


Figure 47: Outlet Action Confirmation

To perform an action, select the check box next to the outlets needing attention, select an action from the drop down box and click the “Execute” button. A dialog box will appear asking for confirmation of the selected actions. Click OK to execute the action. Click cancel to make changes or ignore the action.

Note: “Reboot”, “Reboot-Delayed” and “On/Off-Delayed” actions are subject to the delays set on the *Settings* Tab of the *Control* page.

Configuration

The RCM-O and RCU-O series units list all available outlets under “Configuration” on the *Settings* tab of the *Control* page. Each outlet has five fields associated with it:

| RCU-O Configuration? | | | | | | |
|----------------------|-------------|-----|-----------------|-----------|--------|--------------------|
| Group A Outlet | Name | URL | Delay (seconds) | | | Reboot Duration |
| | | | Power-On | Power-Off | Reboot | |
| 1 | Mail Server | | 0 | 0 | 0 | 0 |

Figure 48: Outlet Configuration

- **Name:** A friendly name to easily identify what is plugged into the outlet. For example: “Mail Server”
- **URL:** A URL associated with the equipment plugged into the outlet. This will appear as a clickable link on the Control Actions Tab next to the outlet status information.
- **Power-On Delay:** Delay from the time the “On – Delayed” action is executed until the outlet will turn on.
- **Power-Off Delay:** Delay from the time the “Off – Delayed” action is executed until the outlet will turn off.
- **Reboot:** Delay from the time the “Reboot-Delayed” action is executed to the time the selected outlets will be turned off.
- **Reboot Duration:** Delay from the time the “Reboot” or “Reboot-Delayed” action is executed and each selected outlet has turned off until the outlet will turn back on.

Note: All delays are in seconds.

Power-On Actions

The state of each of the unit’s switched outlets on unit power-up is user configurable by setting a power-on action.

Available settings are:

- **Delay:** Used in conjunction with On and Last actions to allow sequencing of outlet power-up to prevent overloading circuit breakers with inrush current.
- **Off:** Leaves the outlet off until turned on manually via the Control Actions page.
- **On:** Turns the outlet on.
- **Last:** Returns the outlet to its state prior to the unit losing power.

| Outlet | Name | Delay (seconds) | Action: | | |
|--------|-------------|--------------------|-----------------------|-----------------------|----------------------------------|
| | | | on | off | last |
| 1 | Mail Server | 0 | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> |

Figure 49: Outlet Power-On Action Configuration

Tip: To emulate legacy RCM or RCU behavior for a particular outlet, set the delay to 0 and action to On.

Note: Outlets with their delay values set to 0 will perform the selected action immediately upon receiving power.

Note for units with built-in circuit breakers: Should one of the unit’s circuit breakers trip, upon being reset any outlets powered by that breaker will perform their power-on actions.

Accessories

Serial Communication (Delta Configured Units Only)

The Delta configured units provide an out-of-band, serial line, monitoring interface. The unit provides an RJ-45 port for RS-232 serial communication, giving monitoring via the command line similar to the Telnet service. If the administrator name and password are setup then they must be used to access the serial command line. Type "help" after logging-in to the unit to see a list of available commands.

Note: All data sent via the serial port is unencrypted. Some settings can be changed and user names and network settings are available.

```
Login successful.
Type 'help' or 'help all' for command list.
CLP> help

Format:  command [[optional args] | <required args>]

help     [<command name> | all] - HELP on a specific command or all details
reset    <parameter> - RESET specified parameters to factory default values
report   - REPORT settings and status
net       - List and set NETWORK settings
server   - List and set web SERVER configuration
mail     - List & set MAIL settings
snmp     - List & set SNMP parameters
account  - List & set ACCOUNT Names & passwds
admin    - List & set contact ADMIN information
fcal     - Factory CALibrate a sensor (contact support for instructions!)
fconf    - Factory CONFigure an External sensor (contact support!)
bye      | exit | quit | ^D (EOT character) - End Login session

sensors  - list <sensor id> numbers, measurement Labels, and values
alarms   - List all alarms. {Use 'alarms sensors' to get <sensor id>'s}
control  - List all outlets and present status
```

Figure 50: Serial Command

RSD2X8 Remote Display

This small module comes standard with any Wye configured units (optional for Delta and Horizontal units) and can be mounted in an accessible spot inside or outside the rack or cabinet. A backlit LCD display scrolls the values of items selected on the *Logging* page. The display is connected to the main unit via a 4-conductor handset-style cord. The display's onboard buzzer can be used in conjunction with E-Mail and SNMP to provide local alarming of error conditions. The buzzer can be silenced via the button on the face of the module; however the display's LED indicator will remain lit until the alarm condition is cleared.

IP-Addressable Network Cameras

The unit is able to interface with up to four IP-addressable network cameras. A live snapshot from each camera will be displayed on the unit's *Sensors* page underneath the main unit's graph. Clicking on a snapshot opens the camera's website in a new browser window.



Figure 51: Camera Images

Camera model and IP address are entered on the *Monitoring* tab of the *Configuration* page.

Note: Some cameras require additional software downloads to display live video in a web browser.

RSC Integration

For users with multiple units, Geist RSC software offers:

- Convenient, single-window monitoring of multiple units via simple web-based interface
- Streamlined firmware updating
- Consolidation of alarm settings

See <http://www.geistmfg.com/> for more information.

Alternate Data Formats

In addition to the full access, control and configuration available via a desktop web browser, RCX, RCO, RCU-O and RCM-O Series products present data in multiple formats for easy integration with other monitoring systems. Data formats available via links on the unit's web page are:



Figure 52: Alternate Format Links

- PDA/Phone: Presents data in a format best-suited for PDA or cellular phone web browsers.
- XML: Extensible Markup Language. Presents data in a structured tree for use with automated scripts and monitoring systems.
- MIB: Management Information Base. Downloads the MIB for use with SNMP monitoring tools.

Technical Support

Firmware Version

The firmware version is located in the upper right section of the web interface header, represented by v3.y.xx. Before contacting support, it is recommended that the PDU first be updated to the latest firmware version. If this is not possible, please have the existing firmware version number for the unit available when contacting technical support.



Figure 53: Web Page Header

Firmware Updates

Keep your unit updated with the latest firmware releases or sign up for notifications.
<http://www.geistglobal.com/support>.

Resetting PDU

Should the PDU loose communication, the processor may be manually rebooted without affecting power to the outlets. Pressing the 'Reset' button on the face of the unit will cause the processor to reboot. The web interface will remain off-line during boot up.

Service and Maintenance

No service or maintenance is required. Do not attempt to open the PDU or you may void the warranty. No serviceable parts inside. It is recommended that power be removed from the unit before installing or removing any equipment.

More Technical Support

<http://www.geistglobal.com>
(800) 432-3219
Email: support@geistglobal.com
Or contact your distributor.

Table of Figures

| | |
|--|----|
| Figure 1: Full Length Bracket | 7 |
| Figure 2: Mini "L" Brackets | 7 |
| Figure 3: Vertical Extension Brackets | 8 |
| Figure 4: Toolless Mounting Hardware | 8 |
| Figure 5: Toolless Full Length Bracket | 9 |
| Figure 6: Single Side Mount 2 Unit Brackets | 9 |
| Figure 7: Offset/Side Mount Brackets | 10 |
| Figure 8: 7" Extension Brackets | 10 |
| Figure 9: Flush Mount Brackets | 11 |
| Figure 10: Adjustable Mount Brackets | 11 |
| Figure 11: Panel Mount Brackets | 12 |
| Figure 12: 23" Conversion Mounting Brackets | 12 |
| Figure 13: 19" Horizontal/Panel Mount Brackets | 13 |
| Figure 14: Windows XP network settings for initial setup | 14 |
| Figure 15: MacOS X network settings for initial setup | 15 |
| Figure 16: Internet Explorer's LAN Settings for selecting proxy settings | 15 |
| Figure 17: Sensors Page – Wye Configuration | 16 |
| Figure 18: Sensors Page – Delta Configuration | 17 |
| Figure 19: Sensors Page – Group and Sensor Data | 17 |
| Figure 20: Logging Page | 18 |
| Figure 21: Display Page | 19 |
| Figure 22: Alarms Page | 20 |
| Figure 23: Control Actions Tab | 21 |
| Figure 24: Control Settings Tab | 22 |
| Figure 25: Configuration Network Tab | 23 |
| Figure 26: Configuration Monitoring Tab | 24 |
| Figure 27: Configuration Diagnostics Tab | 25 |
| Figure 28: Configuration Event Log Tab | 26 |
| Figure 29: Configuration Admin Tab | 27 |
| Figure 30: Network Configuration | 28 |
| Figure 31: Manual Time Settings | 29 |
| Figure 32: NTP Time Settings | 29 |
| Figure 33: Time and Date Display | 30 |
| Figure 34: E-Mail Configuration | 30 |
| Figure 35: Email Report Settings | 31 |
| Figure 36: SNMP Configuration | 31 |
| Figure 37: Initial SNMP V3 Data | 31 |
| Figure 388: Account Configuration | 32 |
| Figure 39: Configuration and Supported Models | 33 |
| Figure 40: Admin Information Fields | 34 |
| Figure 41: Admin Information Display | 34 |
| Figure 42: Kilowatt Hours Reset | 34 |
| Figure 43: XML File Upload | 35 |
| Figure 44: SSL Certificate and Private Key Upload | 35 |
| Figure 45: Alarm State Menu | 36 |
| Figure 46: Outlet Actions | 41 |
| Figure 47: Outlet Action Confirmation | 41 |
| Figure 48: Outlet Configuration | 42 |
| Figure 49: Outlet Power-On Action Configuration | 42 |
| Figure 50: Serial Command | 43 |
| Figure 51: Camera Images | 44 |
| Figure 52: Alternate Format Links | 44 |

Figure 53: Web Page Header 45

Revision History

| Revision | Date | Notes | Approved By |
|----------|-----------|---|-------------|
| 0.0 | 4/27/11 | Initial Delta Version | CG |
| 0.1 | 10/14/10 | Original RCM-O/RCU-O – GM1085 | BP |
| 0.2 | 10/15/10 | Original RCX – GM1094 | BP |
| 0.3 | 5/3/11 | Combined RCM, RCU, RCX with Delta configuration | CG |
| 1.0 | 5/10/11 | Initial Combined Version | CG |
| 1.1 | 5/11/11 | New Alarms Image | CG |
| 1.2 | 7/29/11 | LCD added to RCU-OH | CG |
| 1.3 | 4/9/12 | Added RCO | CG |
| 1.4 | 4/27/2012 | Added GT3HD and GTHD | CG |
| 1.5 | 6/22/2010 | Change logo and web address | SR |